



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-CSUB07V2-LED-(All)

Tools Needed:

- Phillips Screwdriver
- Panel Popper



1. Under rear bumper using panel popper remove connector from body panel.



2. Disconnect tail light harness.




3. Remove (2x) phillips screws.



4. Unseat tail light and pull out harness.



5. Remove parking bulb from tail light.
(Never touch bulb with bare hands)

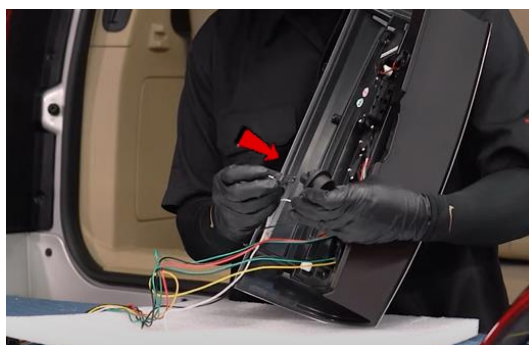

6. Install bulb in Spyder reverse tail light socket.



7. Route Spyder harness and seat tail light.



8. Reinstall (2x) Phillips screws securing tail light.



9. Connect Spyder tail light harness and clip to body panel.



10. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.