



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-CTA15-LED-(All)

Tools Needed:


- ¼" ratchet
- Panel popper
- T15 Torx socket



1. Remove tail light panel cover.



2. Remove (2x) T15 torx screws.

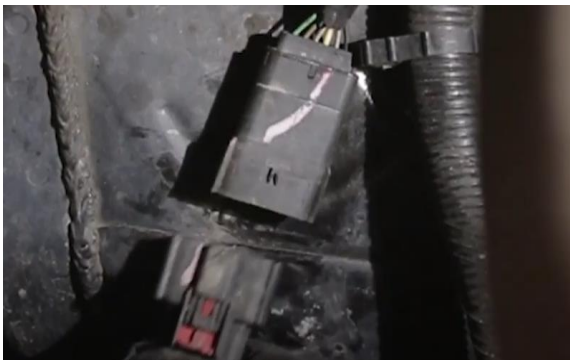

3. Disconnect tail light harness located behind the bumper.



4. Unseat tail light and pull through harness.



5. Guide threwh Spyder tail light harness.



6. Seat Spyder tail light.




7. Reinstall (2x) T15 torx screws.



8. Reinstall tail light cover panel.



9. Connect Spyder tail light harness.

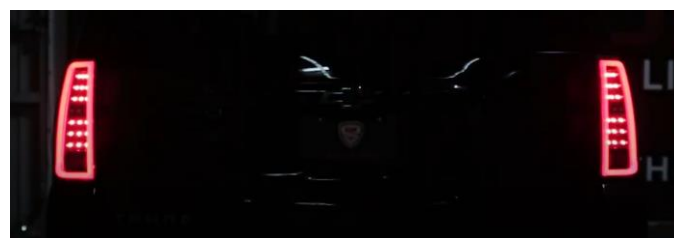

10. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.