



SPYDER

INSTALLATION GUIDE: ALT-YD-DCH05-LED-(ALL COLORS)

Tools Required


No Tools Needed

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the trunk.

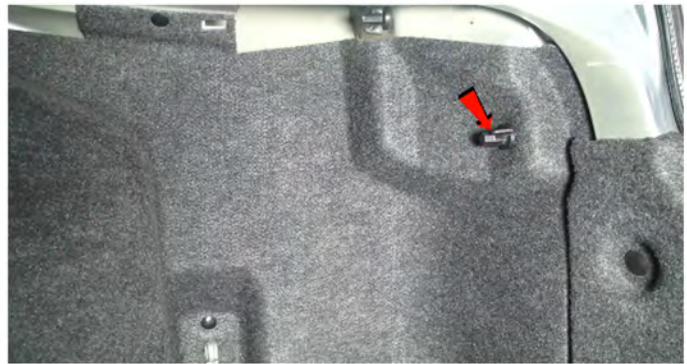

2) Remove [1x] Outer Thumbscrew securing trunk liner.




3) Remove the [2x] thumbscrews securing the tail light hidden under the trunk liner.



4) Unseat the tail light.



5) Unlock the red tab, then disconnect the tail light harness.

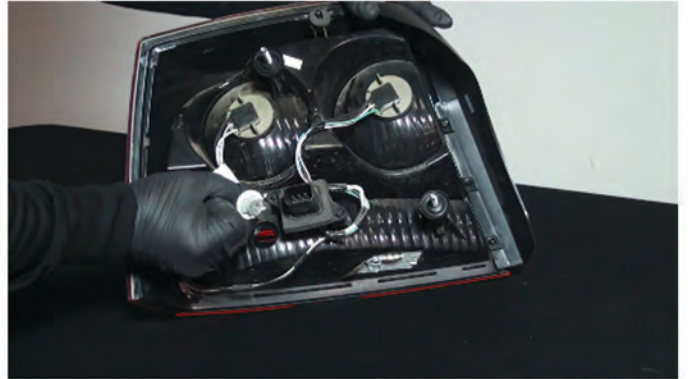

6) Remove the reverse lamp bulb from the OEM tail light. Never touch exposed bulbs with bare hands.



7) Transfer the reverse lamp bulb to the black and wire reverse lamp socket of the Spyder tail light.



8) Connect the Spyder tail light harness to the wiring harness, then lock the red tab.



9) Seat Spyder tail light.



10) Reinstall the two thumbscrews that secure the tail light hidden under the trunk liner.



11) Replace the trunk liner and reinstall the outer thumbscrew.



12) Close the trunk and enjoy your new Spyder LED tail lights.