



# SPYDER

## INSTALLATION GUIDE: ALT-YD-DMAG05-LED-(ALL COLORS)

### Tools Required Panel Popper




**\*Please Note\***

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the tailgate.

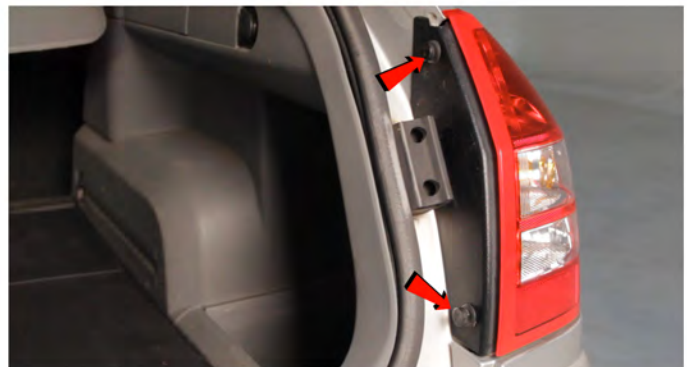

2) Remove [2x] plastic retainers securing the tail light along the tailgate sill.



3) Remove the tail light cover panel.




4) Remove the thumbscrew securing the tail light.



5) Unseat the tail light.



6) Disconnect the tail light wiring harness.

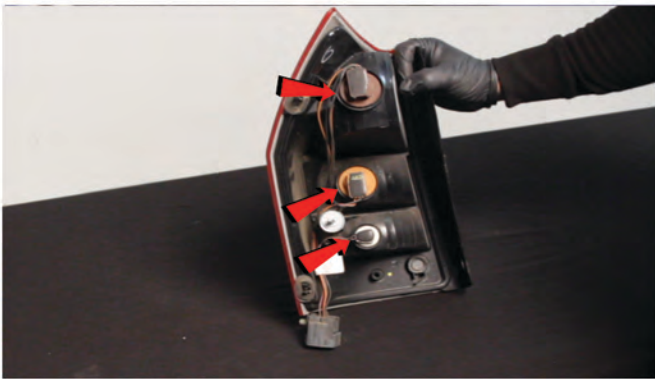


7) Remove the brake/park lamp, turn signal and reverse lamp sockets from the OEM tail light. Never touch exposed bulbs with bare hands.




8) Remove the harness from the OEM tail light.



9) Remove the brake lamp bulb from its socket.

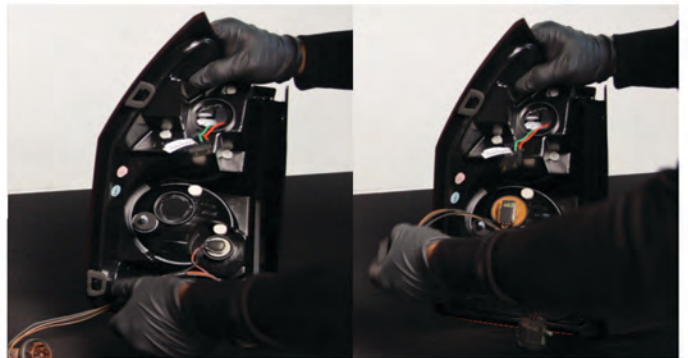

10) Install the reverse and turn signal sockets into the Spyder tail light.

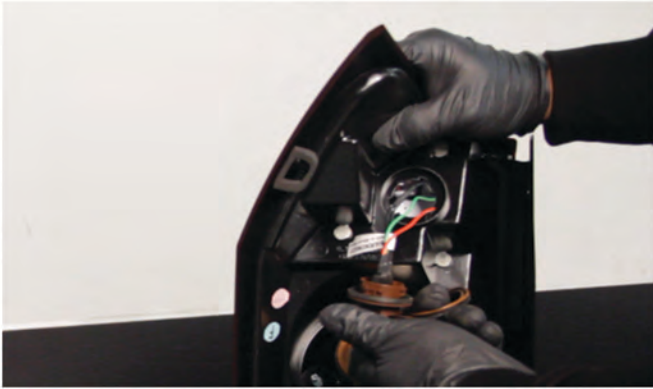

11) Install the Spyder socket insert into the brake lamp socket. Align the black wire side of the insert with the black wire side of the socket to ensure correct polarity, then install the socket.



12) Reconnect the tail light harness.



13) Seat the Spyder tail light.



14) Reinstall [2x] plastic retainers to secure the tail light.



15) Reinstall the thumbscrew to secure the tail light, then reinstall the tail light cover panel.



16) Close the tailgate and enjoy your new Spyder LED tail lights.