



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: ALT-YD-DMAG05-LED-(All)

Tools Needed:

- Panel Popper



1. Remove (2x) plastic retainers using the panel popper.



2. Remove tail light access cover.



3. Remove (1x) thumbscrew securing the tail light.



4. Unseat tail light.



5. Disconnect tail light harness.




6. Remove bulb sockets from tail light, next remove harness from tail light. (Make sure never to touch bulbs with bare hands)



7. Remove brake lamp bulb from socket.



8. Install reverse socket and turn signal socket into Spyder tail light.

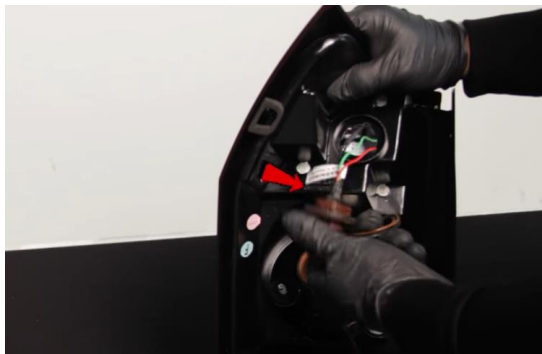

9. Install the socket insert into the brake light socket making sure to line up the black wire on the socket to the black wire on the socket insert.



10. Connect wiring harness to Spyder tail light.



11. Seat Spyder tail light.



12. Reinstall (2x) plastic retainers.



13. Reinstall thumbscrew securing tail light.



14. Reinstall access cover.



15. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder tail lights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.