



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: ALT-YD-DRAM09V2-LED-(All)

### Tools Needed:


- ¼" ratchet
- T25 Torx socket



1. Remove (2x) T25 torx screws.



2. Unseat tail light.

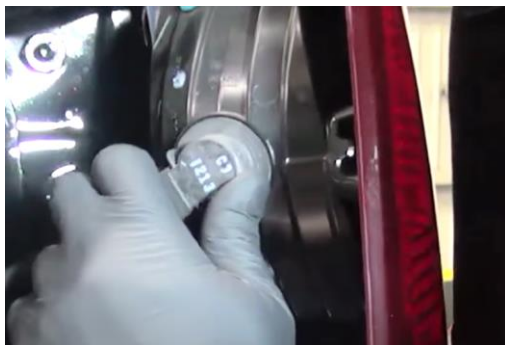

3. Remove reverse and brake tail light sockets. (Never touch bulb with bare hands)



4. Remove brake bulb from socket.




5. Install socket insert with black wire on the black wire side of socket.



6. Install sockets into Spyder tail light.



7. Seat Spyder tail light.

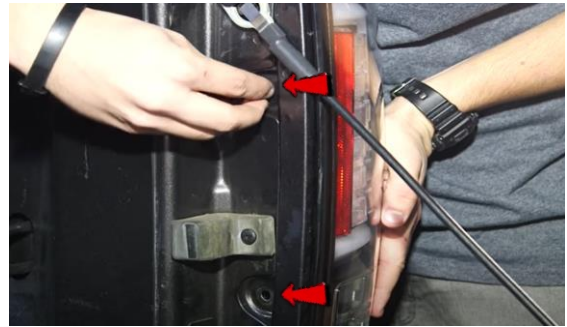

8. Reinstall (2x) T25 torx screws.



9. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.