



SPYDER

INSTALLATION GUIDE:

ALT-YD-FF15097-LED (ALL COLORS)


Tools Required

10mm Socket



Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.

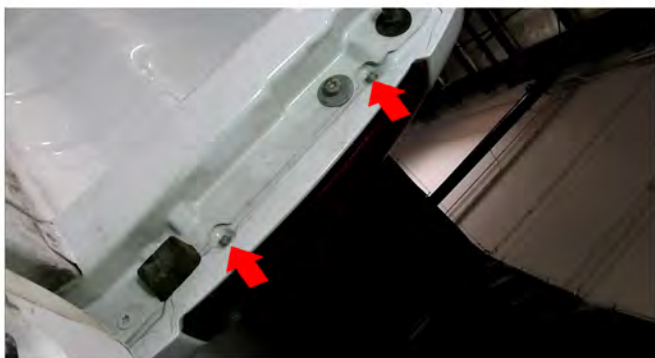


1) Open the tailgate. Remove [2x] 10mm bolts securing the tail light to the body.



2) Unseat the tail light by pulling it outward and away from the body.



3) Remove the brake lamp and reverse lamp bulb sockets from the housing, then remove the OEM tail light housing and set it aside.

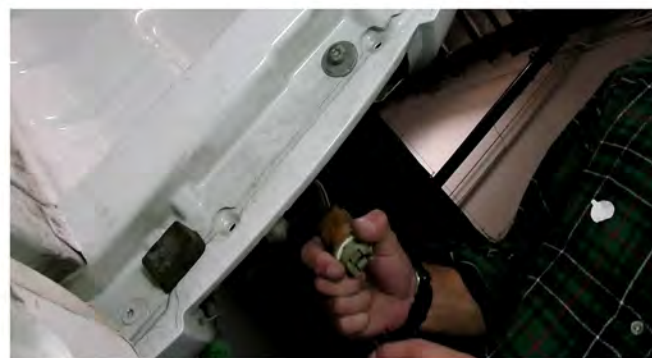


4) Remove the brake lamp bulb from the socket.




5) Locate the SPYDER headlight. Locate the wedge bulb socket insert harness. Install the wedge bulb socket insert, making sure to align the black wire side of the insert harness and the black wire side of the bulb socket harness. Failure to do so could result in electrical problems.



6) Install the reverse lamp socket and brake lamp socket into the Spyder tail light housing, being sure to seal the bulb sockets properly.

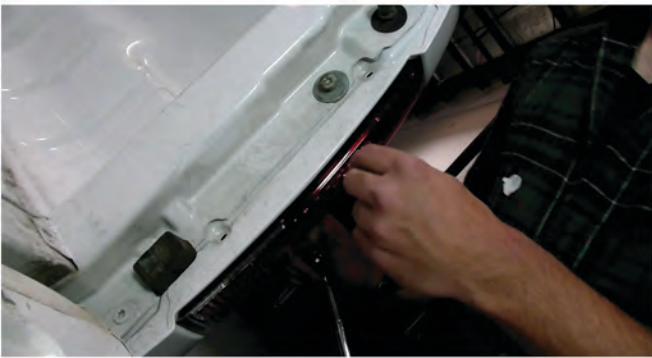

7) Seat the SPYDER tail light.

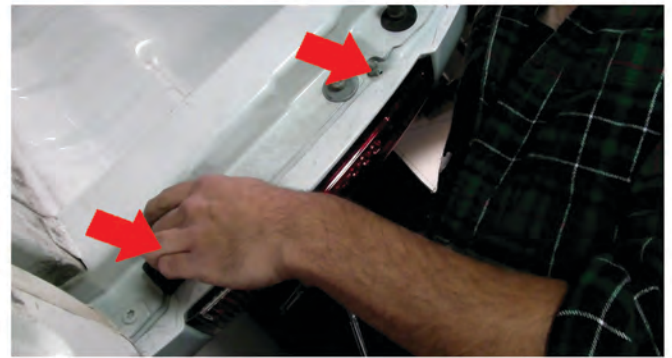

8) Reinstall [2x] 10mm bolts securing tail light, then close the tail gate.