



SPYDER

INSTALLATION GUIDE: ALT-YD-FM05-LED-(ALL COLORS)

Tools Required

10mm Socket & Ratchet
Panel Popper
Phillips Drivers

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the trunk.



2) Remove [2x] plastic retainers securing the trunk liner panel.



3) Remove [1x] plastic retainer securing the trunk liner panel.



4) Remove [1x] thumbscrew securing the trunk liner panel.




5) Remove the trunk liner panel.



6) Remove [3x] 10mm nuts securing the tail light.



7) Unseat the tail light.

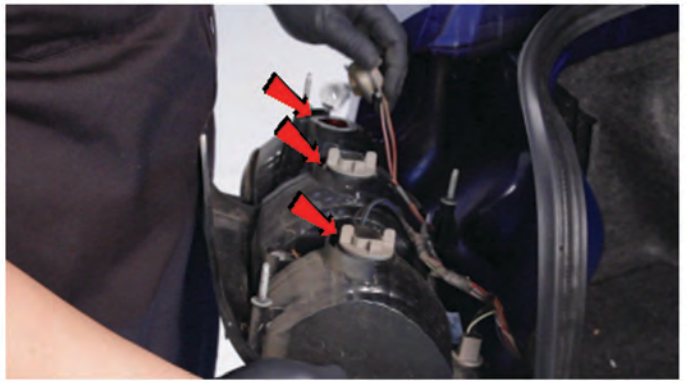

8) Remove [3x] brake lamp sockets from the OEM tail light. Never touch exposed bulbs with bare hands.



9) Remove the reverse lamp socket from the OEM tail light.




10) Reinstall the reverse lamp socket into the Spyder tail light.



11) Remove all three brake lamp bulbs from their sockets.




12) Install the Spyder socket inserts into the corresponding brake lamp sockets to connect the Spyder tail light. Align the black wire side of the socket insert with the black wire side of the socket to ensure correct polarity.

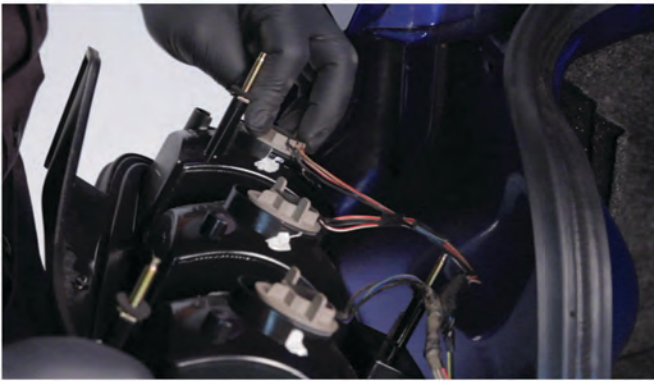

13) Reinstall [3x] brake lamp sockets into the Spyder tail light.



14) Seat the Spyder tail light.

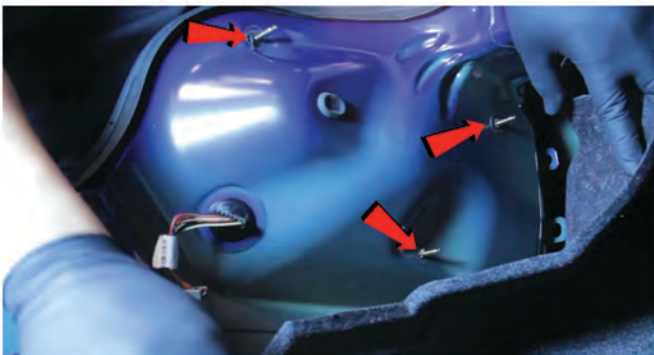


15) Reinstall [3x] 10mm nuts to secure the tail light.



16) Reinstall the trunk liner panel.



17) Reinstall [1x] thumbscrew to secure the trunk liner panel.

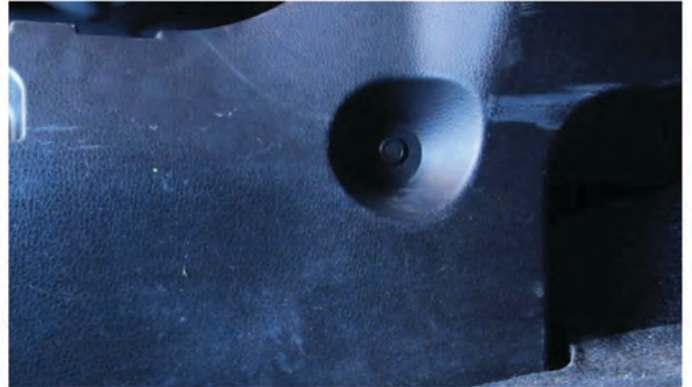

18) Reinstall [1x] plastic retainer.



19) Seat the Spyder headlight.



20) Close the trunk and enjoy your new Spyder LED Tail lights.