



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: ALT-YD-FM05-LED-BK

### Tools Needed:


- ¼" ratchet
- 10mm socket
- Panel popper



1. Remove (2x) plastic retainers with panel popper.



2. Inside trunk remove (1x) plastic retainer.

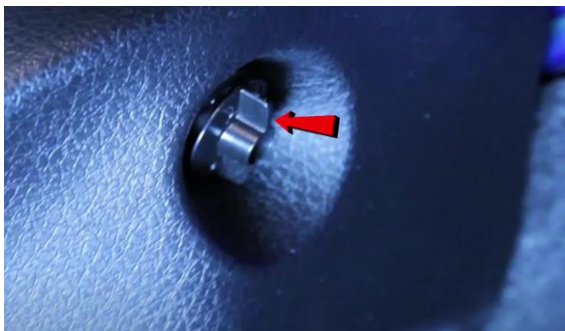

3. Remove thumb screw securing panel.




4. Remove trunk liner panel.



5. Remove (3x) 10mm nuts securing tail light.



6. Unseat tail light.

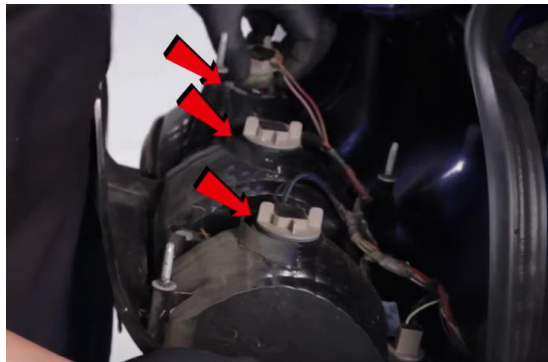

7. Remove (3x) brake bulb sockets.



8. Remove reverse light socket.




9. Install reverse light socket into Spyder tail light.



10. Remove (3x) brake light bulbs from sockets.




11. Install (3x) socket insert into brake bulb sockets. (Align black wire of socket with black wire of socket insert)

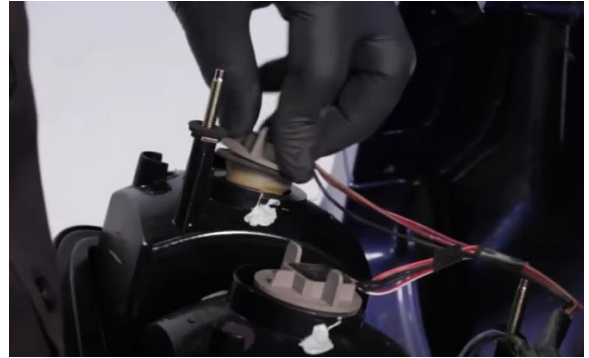


12. Install (3x) sockets into Spyder tail light.



13. Seat Spyder tail light.

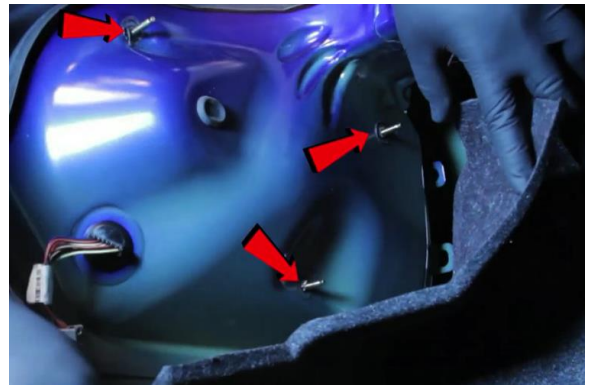

14. Reinstall (3x) 10mm nuts.

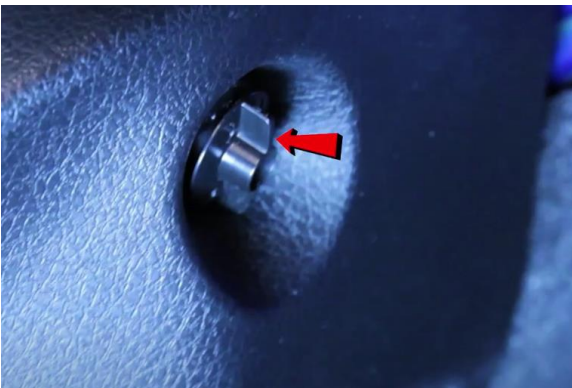

15. Reinstall trunk panel and thumbscrew.



16. Reinstall plastic retainer.



17. Reinstall (2x) plastic clips.



18. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.