



SPYDER™

SKU# 5086693



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2005-2009 FORD MUSTANG

 [FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)
 [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)
 [INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)
 [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
 [TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)

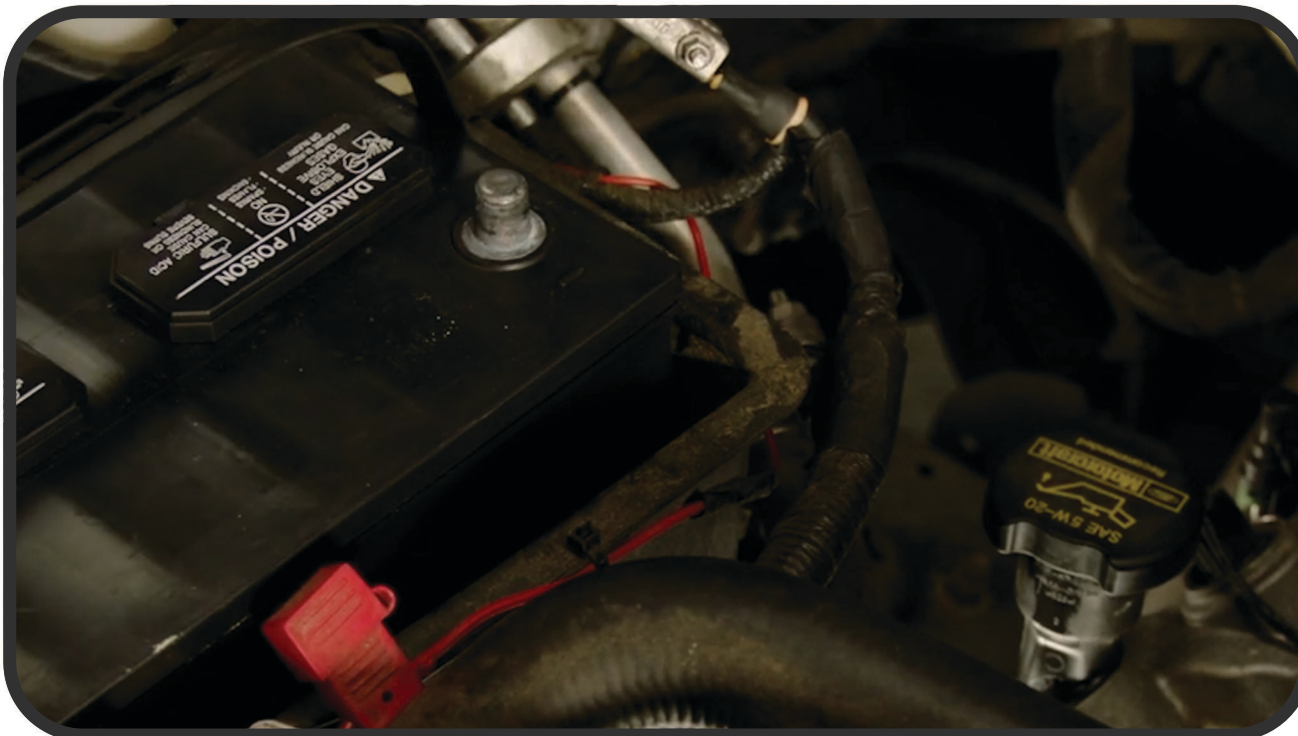
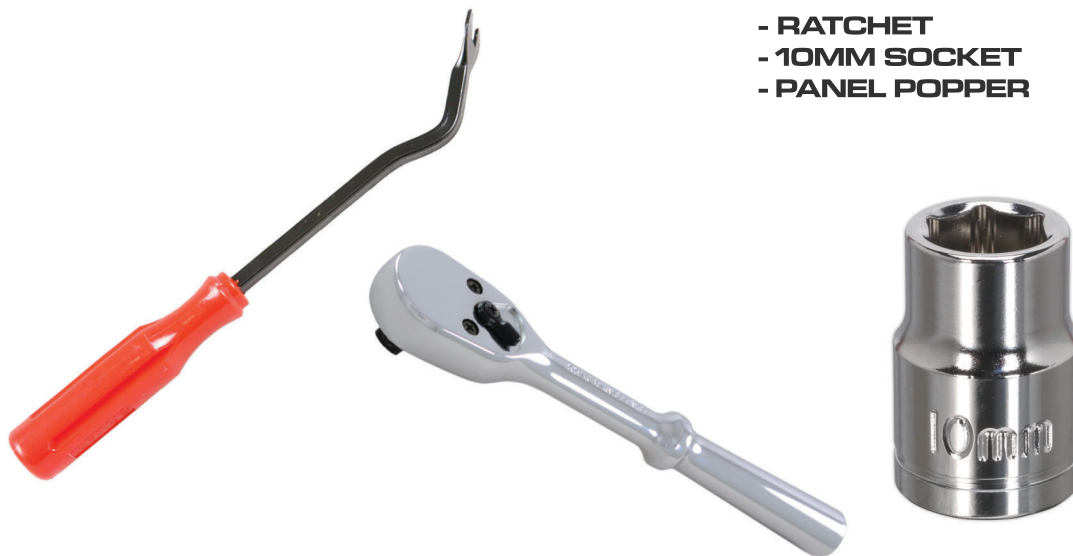


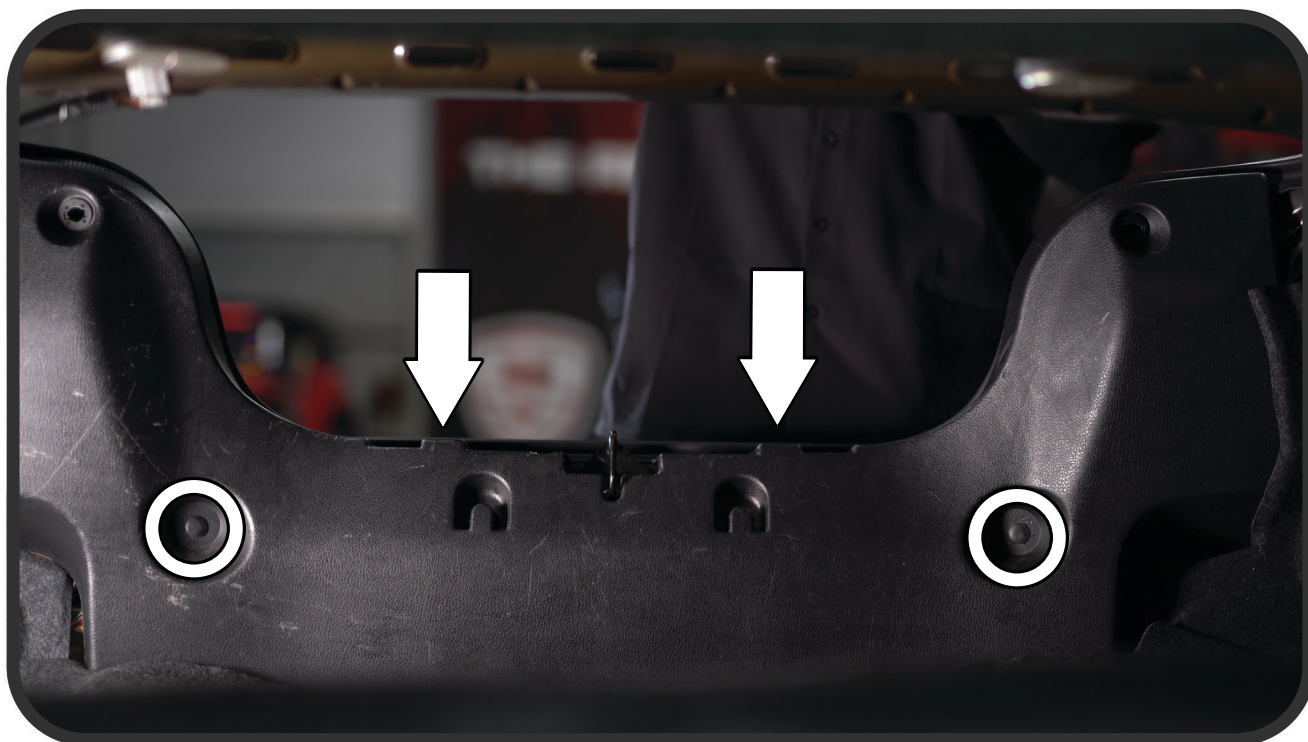
SCAN THE QR CODE
TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- RATCHET
- 10MM SOCKET
- PANEL POPPER

**STEP 1:****DISCONNECT THE NEGATIVE BATTERY TERMINAL**


STEP 2:

REMOVE (4) PUSH PINS THAT SECURE THE TRUNK LINER


STEP 3:

REMOVE THE (2) THUMBSCREWS



STEP 4:
REMOVE THE TRUNK LINER PANEL



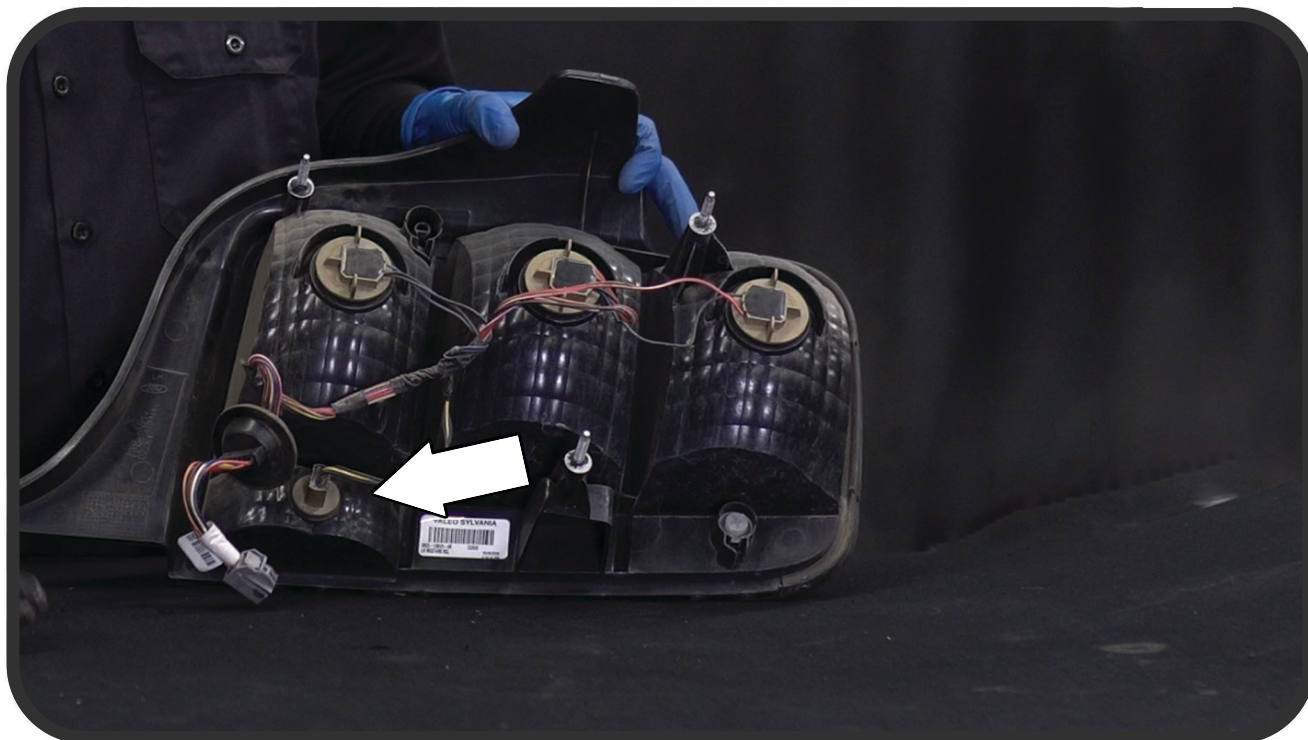
STEP 5:
REMOVE THE (3) 10MM NUTS SECURING THE TAIL LIGHT

**STEP 6:**

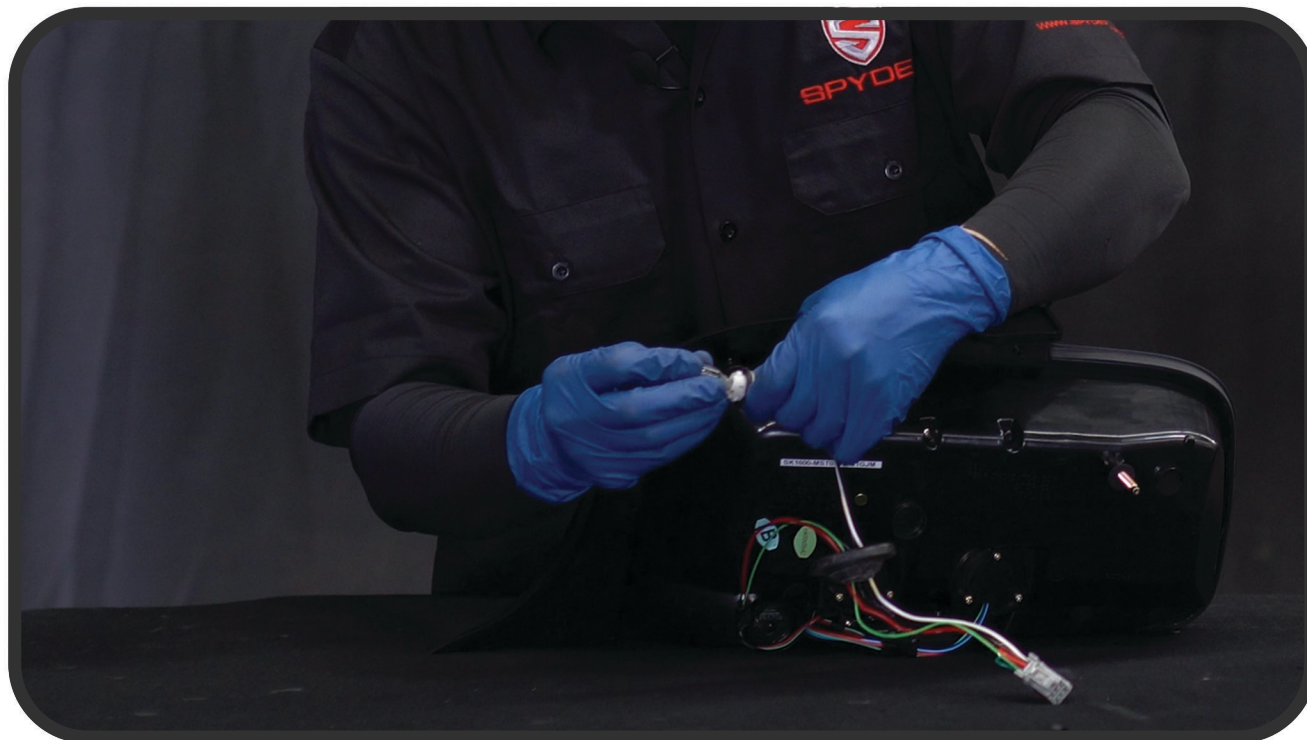
DISCONNECT THE TAIL LIGHT HARNESS AND PUSH THROUGH THE RUBBER GROMMET

**STEP 7:**

UNSEAT THE TAIL LIGHT

**STEP 8:**

**REMOVE THE REVERSE BULB SOCKET AND REMOVE THE BULB
(NOTE: NEVER TOUCH BULB WITH BARE HANDS)**

**STEP 9:**

**INSTALL REVERSE BULB ON THE SPYDER TAIL LIGHT AND
SECURE THE SOCKET**

**STEP 10:**

PULL THE SPYDER TAIL LIGHT HARNESS THROUGH THE OPENING AND SEAT THE RUBBER GROMMET

**STEP 11:**

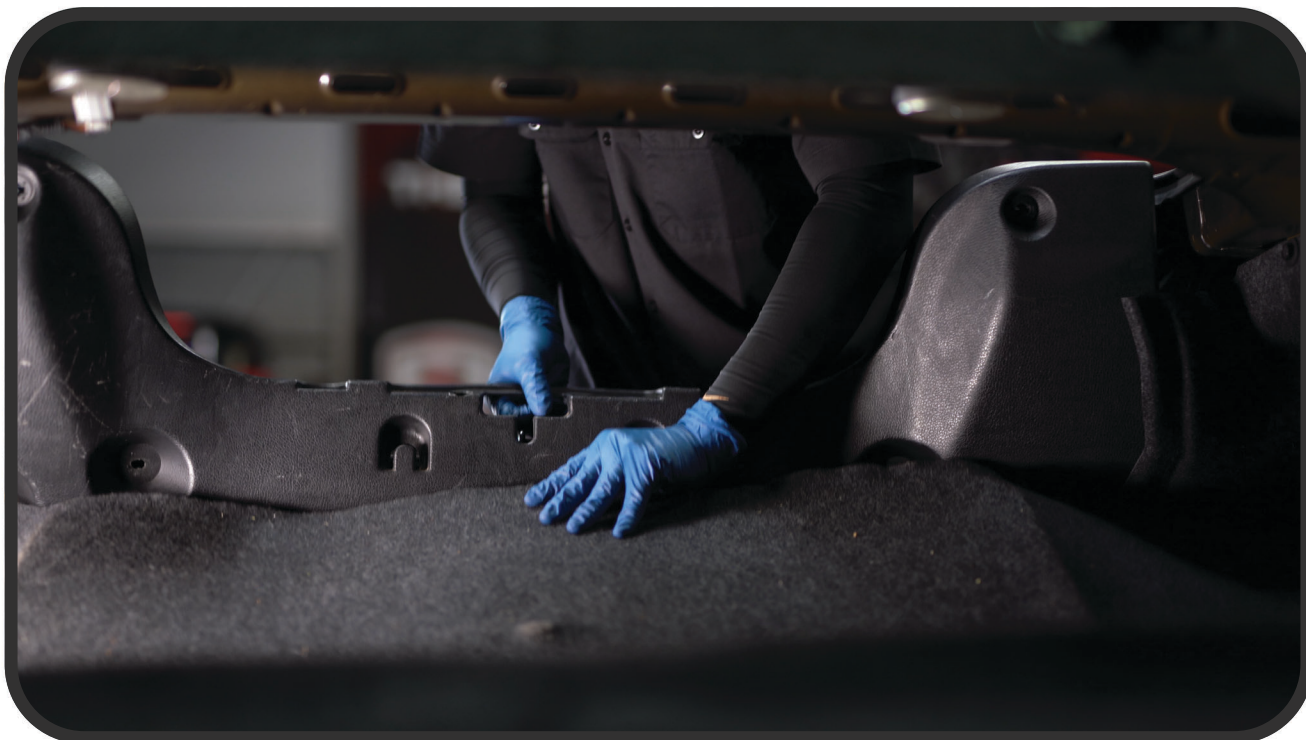
SEAT THE SPYDER TAIL LIGHT



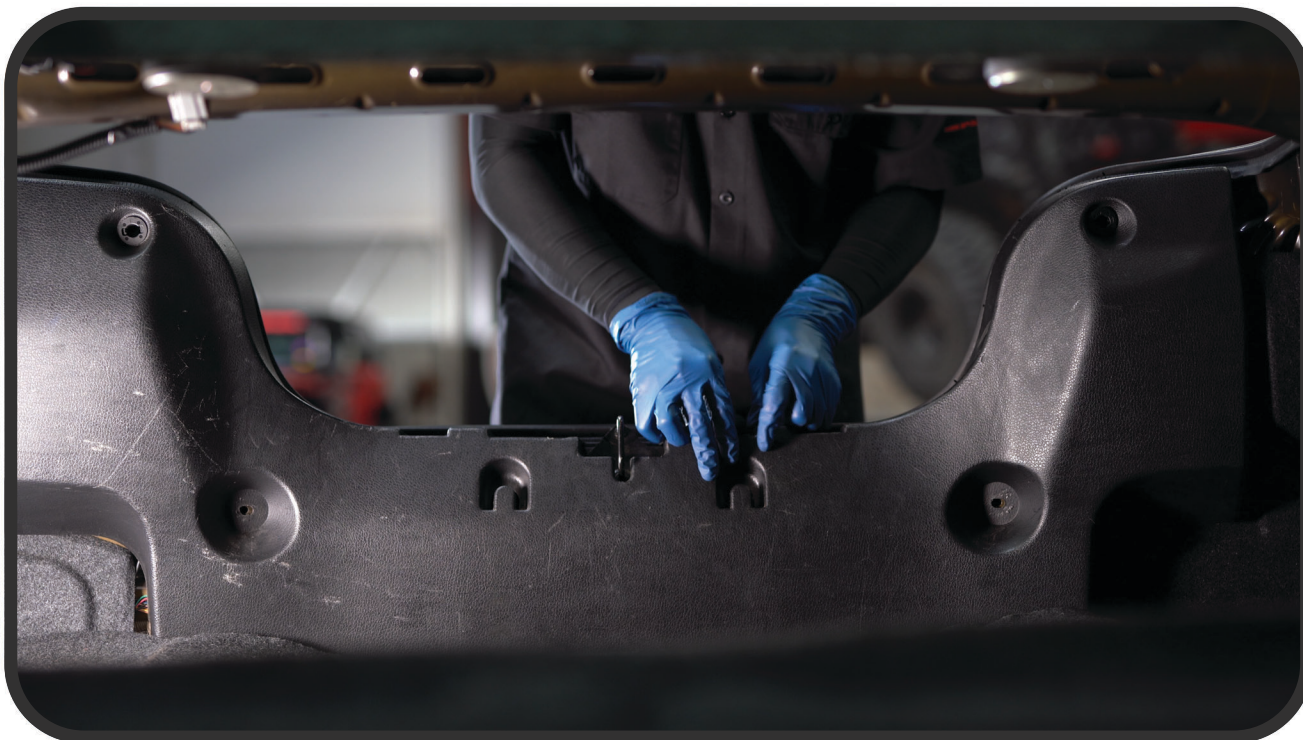
STEP 12:
CONNECT THE TAIL LIGHT HARNESS



STEP 13:
REINSTALL THE (3) 10MM NUTS TO SECURE THE TAIL LIGHT



STEP 14:
REINSTALL THE TRUNK LINER PANEL



STEP 15:
REINSTALL THE (4) PUSH PINS SECURING THE TRUNK LINER PANEL


STEP 16:

REINSTALL THE (2) THUMBSCREWS TO FINISH SECURING THE TRUNK LINER PANEL


STEP 17:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY