



SPYDER

INSTALLATION GUIDE: ALT-YD-HA08-4D-LED-(ALL COLORS)

Tools Required

10mm Socket wrench/ratchet

Panel Popper

Phillips Screwdriver

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Replacing the tail lights will require removing the bumper fascia. Tape off the edges of the bumper and rear fender to help prevent damage to the paint while you are working on the car.



2) Move to the wheel well and remove the two phillips head screws securing the edge of the rear bumper fascia.



3) Remove the two plastic retainers securing the underside of the rear bumper fascia.



4) Open the trunk and remove the plastic cover on each side of the trunk opening using the panel popper.



5) Remove the 10mm bolt on either side of the trunk securing the rear bumper fascia.



6) Unseat the rear bumper fascia by pulling the edges of the fascia outwards.




7) Remove the bumper fascia and set it aside for now.



8) Remove the three plastic retainers securing the trunk liner on either side using the panel popper. Peel back the trunk liner to access the backside of the tail lights.



9) Pull up on the center trunk trim panel to remove it.

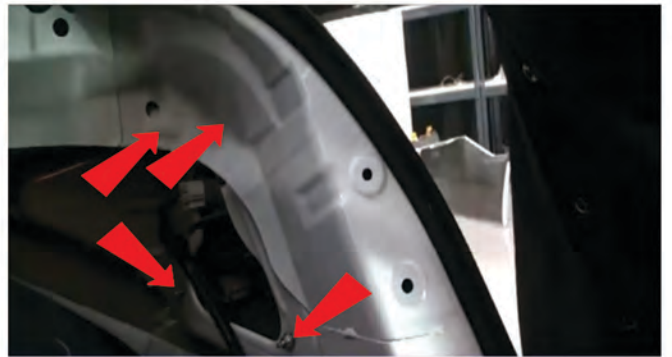

10) Remove the four 10mm nuts securing the tail light.



11) Disconnect the brake lamp harness.



12) Remove the two 10mm bolts securing the tail light bracket.



13) Unseat the OEM tail light.



14) Disconnect the turn signal and reverse lamp wiring harnesses from the OEM tail light, then remove the tail light completely.



15) Remove the brake lamp socket, turn signal socket and reverse lamp socket from the OEM tail light housing. Install the turn signal and reverse lamp bulb sockets into your new SPYDER tail light.



16) Reconnect the turn signal and reverse lamp wiring harnesses.



17) Seat the SPYDER tail light.



18) Remove the brake lamp bulb from the brake lamp socket. Connect the empty socket to the brake lamp wiring harness.



19) Insert the SPYDER tail light's brake lamp socket insert harness into the brake lamp bulb socket, being sure to align the black wire on both sides of the harness connection. Failure to line up the black wires will blow fuses and void your warranty. Insert the bulb socket and twist it into place.



20) Reinstall the four 10mm nuts that secure the tail light to the body.



21) Replace the trunk liner and reinstall the three plastic retainers securing it.



22) Reinstall the trunk filler panel by pushing it back into place.




23) Replace the tail light bracket and reinstall the two 10mm bolts that secure it.




24) Reseat the rear bumper fascia.



25) Reinstall the 10mm bolt on either side of the trunk opening to secure the fascia, then replace the bumper fascia bolt cover insert caps.

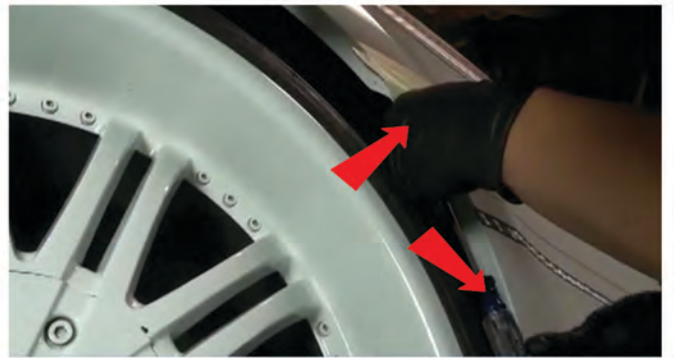

26) Reinstall the two phillips head screws that secure the rear bumper fascia in each of the rear wheel wells.

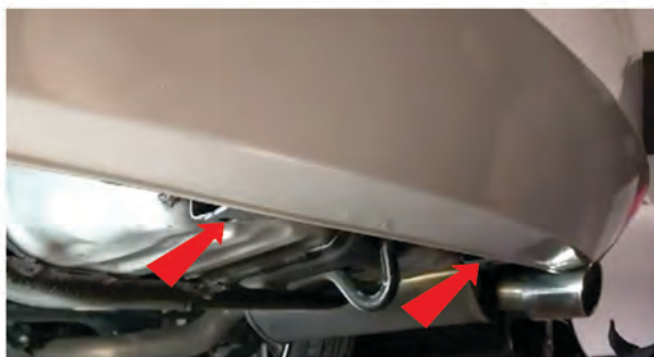

27) Reinstall the two plastic retainers securing the rear bumper fascia from below.



28) Enjoy your SPYDER LED tail lights.