




Installation Instructions: ALT-YD-JWA07V2-LBLED-(All)

Tools Needed:

- Phillips screw driver



1. Remove (2x) phillips screws.

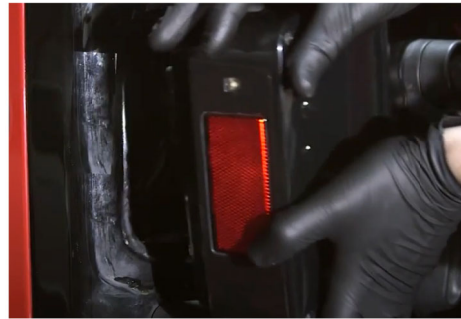


2. Unseat tail light.




4. Connect Spyder wire harness.



3. Disconnect wire harness.

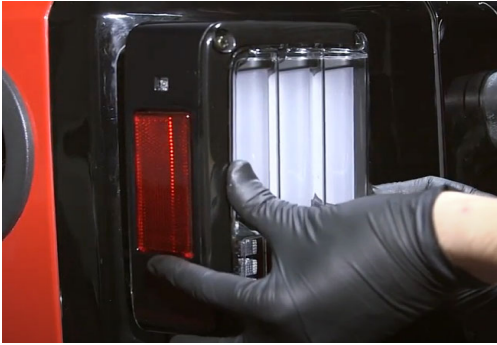

5. Seat Spyder tail light.

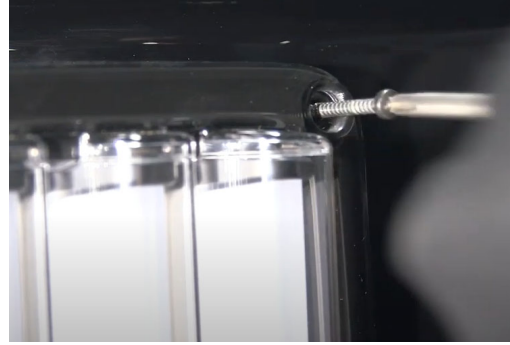

Reinstall (2x) phillips screws.



7. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.