



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-MBW16398-LED-(All)

Tools Needed:

- ¼" ratchet
- 10mm socket



1. Remove (2x) 10mm nuts securing tail light.




2. Unseat tail light.




3. Unclip wire harness from tail light.



4. Remove bulb bar from tail light by squeezing tabs inward.

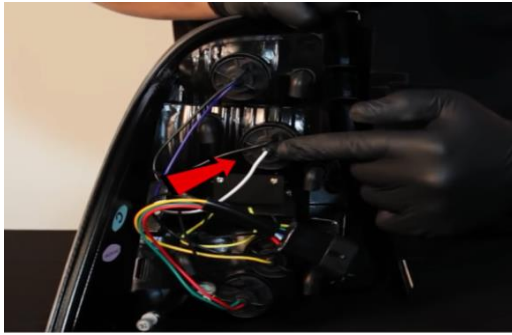

5. Remove reverse bulb socket from Spyder tail.

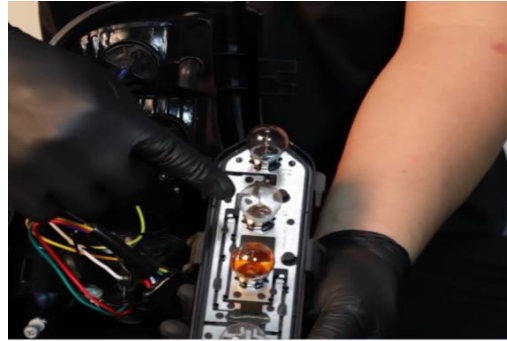

6. Remove second bulb down from bulb bar. (Never touch bulb with bare hands)



7. Install bulb into Spyder reverse socket and install socket into Spyder tail light.



8. Connect Spyder tail light harness.



9. Seat Spyder tail light.



10. Reinstall (2x) 10mm nuts.



11. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.