



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-NGTR09-LED-BK

Tools Needed:

- ¼" ratchet
- 10mm socket
- Panel popper



1. Remove (2x) clips securing wheel well liners.



2. Remove (3x) 10mm bolts securing each side of bumper.



3. Remove (4x) plastic clips securing each side of trunk liner.



4. Disconnect tail light harness.



5. Remove (5x) 10mm nuts securing the bumper.



6. Remove weather strip.




7. Unseat rear bumper to gain access to rubber grommet.



8. Unseat grommet and pull out wire harness.




9. Remove bumper.

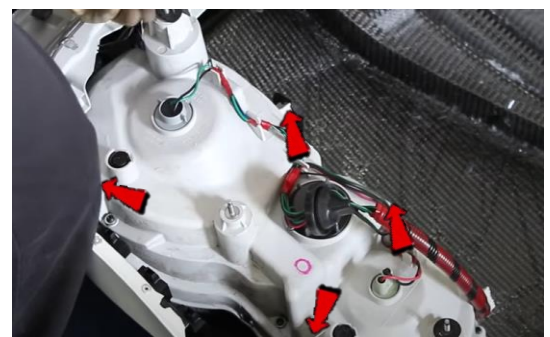

10. Remove (4x) 10mm bolts securing tail light.



11. Seat Spyder tail light.

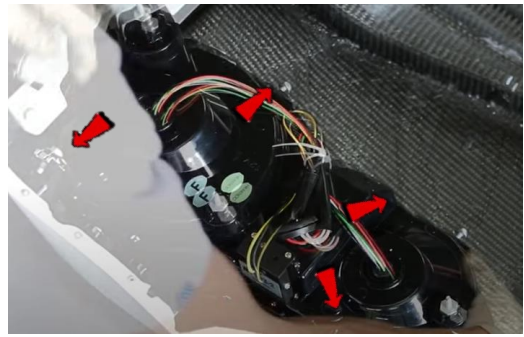

12. Reinstall (4x) 10mm bolts securing tail light.



13. Route tail light harness and seat rubber grommet.



14. Seat bumper.



15. Connect tail light harness.




16. Reinstall brackets and (3x) 10mm bolts.



17. Seat liner and install (2x) plastic clips.




18. Reinstall (5x) 10mm nuts securing the bumper.

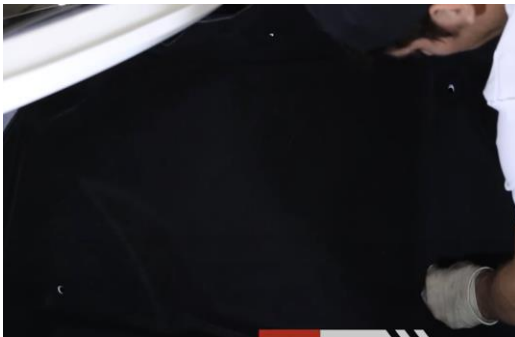

19. Reinstall trunk liner and (4x) plastic retainers.



20. Reinstall weather strip.

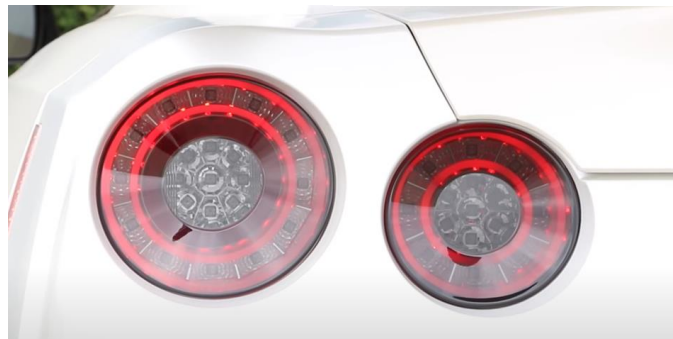

21. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.