



SPYDER

INSTALLATION GUIDE: ALT-YD-NTI04-LED-(ALL COLORS)

Tools Required 10mm Socket + Ratchet



Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the tailgate.




2) Remove [2x] 10mm bolts securing the tail light.




3) Unseat the OEM tail light.




4) Remove the cargo lamp, reverse lamp, turn signal and brake lamp sockets from the OEM tail light. Never touch exposed bulbs with bare hands.

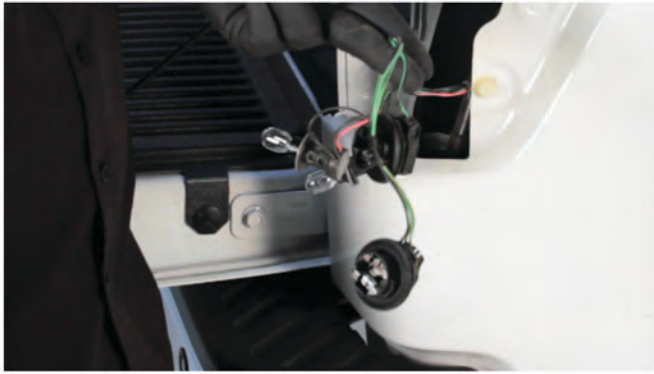

5) Remove the bulbs from the turn signal and brake lamp sockets.

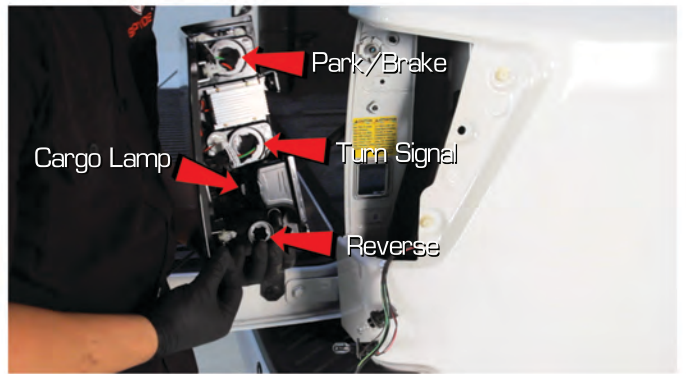

6) Locate the Spyder tail light.

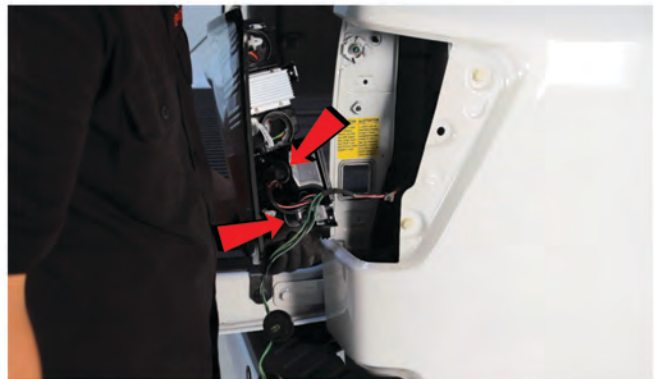

7) Reinstall the cargo lamp and reverse lamp bulb sockets in the Spyder tail light.



8) Insert the lower bulb socket insert into the turn signal socket of the wiring harness. Align the black wire side of the harness with the black wire side of the insert. Install the socket into the lower position of the Spyder tail light.



9) Insert the upper bulb socket insert into the brake lamp/park lamp socket of the wiring harness. Align the black wire side of the insert with the black wire side of the socket. Install the socket into the upper position of the Spyder tail light.



10) Your Spyder tail light is now ready to install.



11) If the guide tabs of your Titan are still intact, remove and discard the guide tabs attached to your Spyder tail light.



12) Seat the Spyder tail light by mounting it onto the guide tabs.



13) Reinstall [2x] 10mm bolts to secure the tail light to the body.



14) Close the tailgate and enjoy your new Spyder LED tail lights.