



SPYDER

INSTALLATION GUIDE: ALT-YD-P99705-LED-(ALL COLORS)

Tools Required T-25 Torx Driver



Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the bonnet.



2) Remove the [2x] T-25 Torx screws securing the
tail light.



3) Unseat the OEM tail light.




4) Disconnect the wiring harness.



5) Remove the fog lamp bulb from its socket on the OEM tail light. Never touch exposed bulbs with bare hands.



6) Transfer the fog lamp bulb to the blue and black wire socket of your Spyder tail light, then reinstall the socket. Now your Spyder tail light is ready to install.

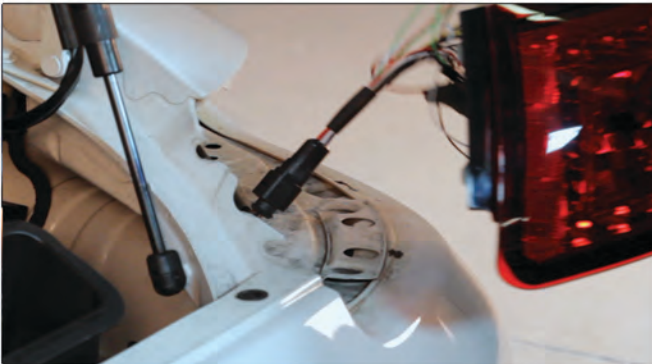

7) Connect the Spyder tail light to the OEM wiring harness.



8) Seat the Spyder tail light.



9) Reinstall the two T-25 Torx screws.



10) Close the tailgate and enjoy your new Spyder tail lights!