



SPYDER

INSTALLATION GUIDE: ALT-YD-PCAY03-LED-(ALL COLORS)

Tools Required

#5 Hex Key
Panel Popper
Phillips Drivers

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.




1) Open the tailgate.



2) Remove [2x] plastic caps covering the tail light bolts.




3) Remove [2x] #5 Hex Key Bolts securing the tail light.

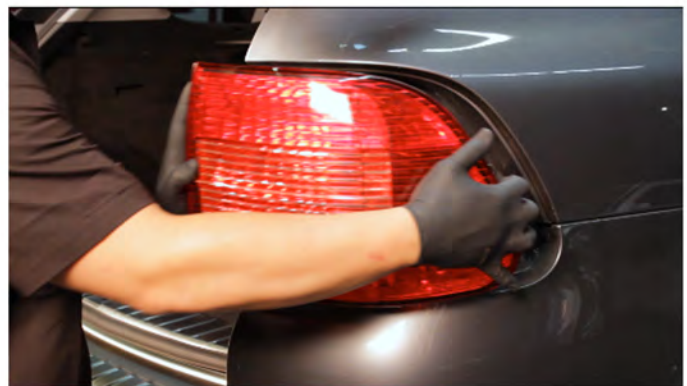

4) Unseat the tail light.




5) Disconnect the tail light harness.

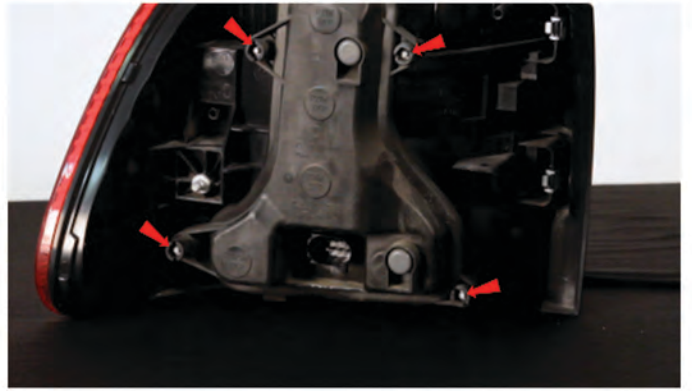

6) Remove [4x] phillips screws securing the bulb plate to the tail light.




7) Remove the bulb plate from the OEM tail light.

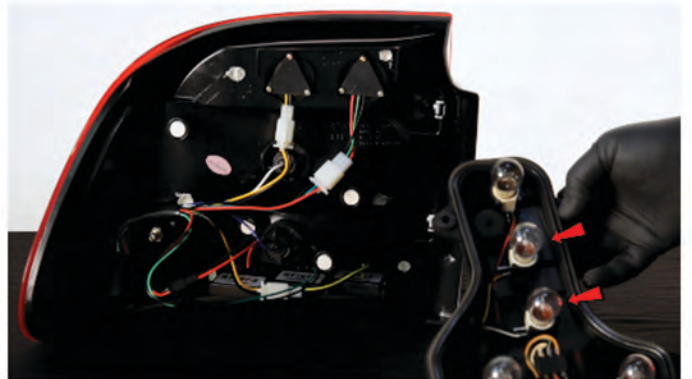

8) Remove rear fog lamp and reverse lamp bulb from the bulb plate. Never touch exposed bulbs with bare hands.



9) Transfer one bulb to the blue and black wire Spyder rear fog lamp socket.

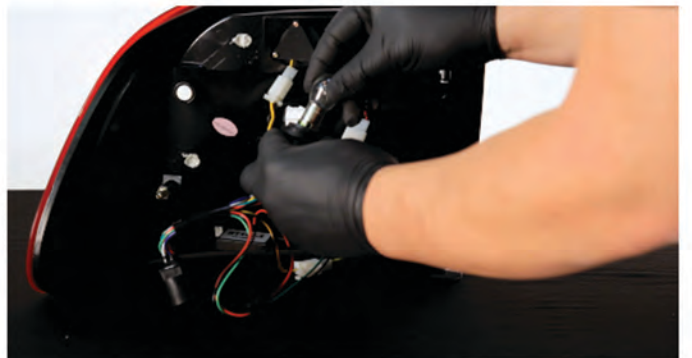

10) Transfer the other bulb to the white and black wire Spyder reverse lamp socket.



11) Reconnect the tail light wiring harness.




12) Seat the Spyder tail light.



13) Remove [2x] plastic caps from the Spyder tail light.



14) Reinstall [2x] #5 Hex Cap bolts to secure the tail light.

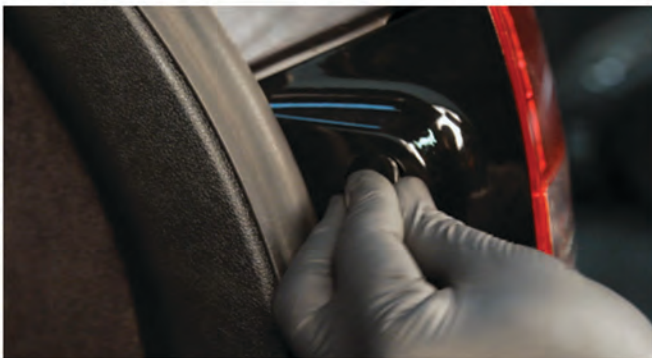

15) Reinstall [2x] plastic caps.



16) Close the tailgate and enjoy your new LED tail lights from Spyder Auto.