



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-SI085D-SEQ-(All)

Tools Needed:


- ¼" ratchet
- 8mm and 10mm socket
- Panel popper
- Phillips screw driver



1. Remove cargo mat.



2. Remove (2x) retaining clips securing spare tire foams.

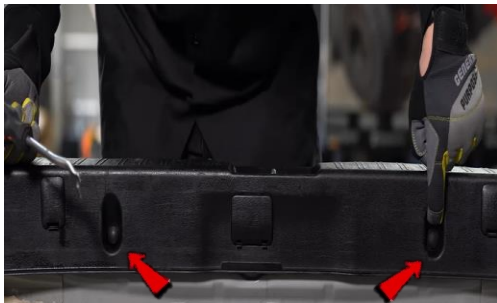


3. Remove (2x) plastic clips securing rear panel.




4. Remove cover to reveal bolt securing side panel.



5. Remove (1x) 10mm bolt.

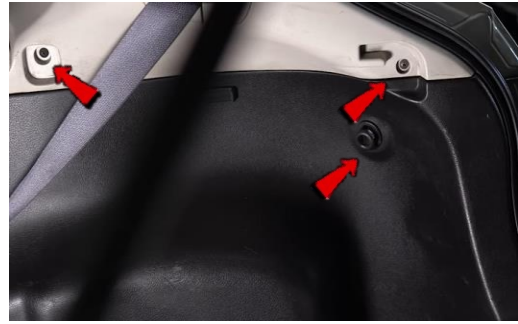


6. Remove (3x) phillips screws.

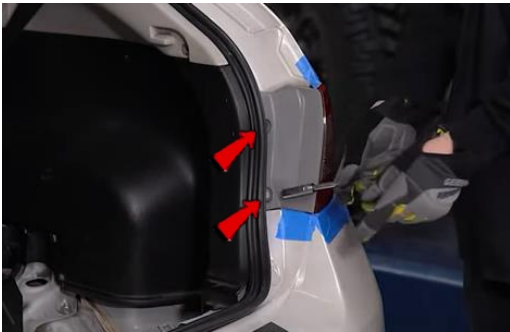

7. Remove (2x) 10mm bolt.



8. Unseat tail light.

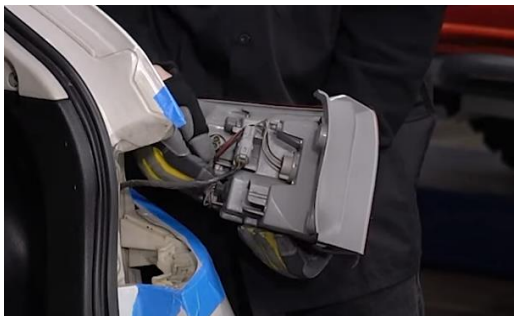

9. Disconnect harness.



10. Connect Spyder tail light harness.



11. Push factory harness grommet in.



12. Push in Spyder wires and seat new rubber grommet.



13. Tuck in remaining wires. (Note there will be (2x) unused wires for US models)




14. Seat Spyder tail light.



15. Reinstall (2x) 10mm bolts.



16. Remove (3x) plastic clips.

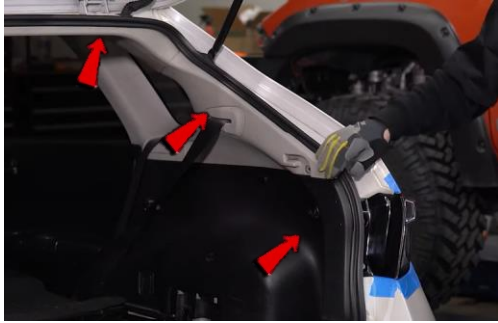

17. Pull back plastic panels to access new wires for inner tail light.



18. Route harness up through loosened panels.




19. Loosen top and bottom of rubber boot.



20. Route harness through rubber boot.



21. Push wire up and reinstall rubber boot.

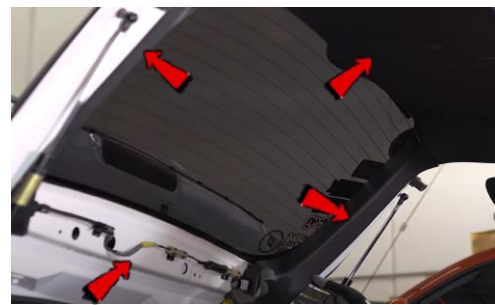

22. Pull off (4x) trunk panel to route inner tail light harness.



23. Remove inner tail light socket.



24. Remove (3x) 8mm nuts securing inner tail light.




25. Unseat inner tail light.



26. Seat Spyder inner tail light.



27. Reinstall (3x) 8mm nuts securing inner tail light.

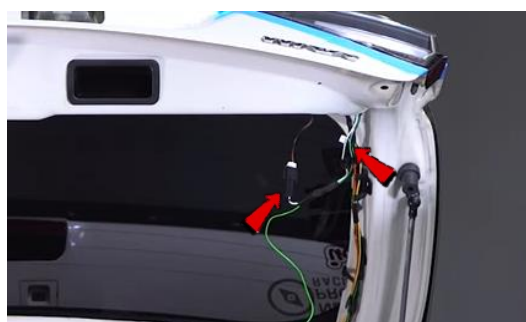

28. Route new Spyder harness following factory wires and connect (2x) wire harnesses to inner tail light. (Align black wire of socket to black wire of socket insert)




29. Push in wires and route remaining green wire to license plate light.



30. Tap green wire to factory black wire with white stripe. Reinstall License plate socket.



31. Reinstall (4x) hatch plastic trims.

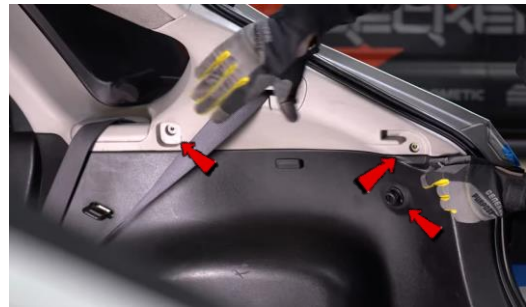

32. Realign plastic panels and install (3x) phillips screws.



33. Reinstall (1x) 10mm bolt and plastic cover.



34. Reinstall rear trunk panel and (2x) plastic clips.



34. Reinstall spare tire foams and (2x) retaining clips.



35. Reinstall (3x) plastic clips.



36. Reinstall trunk liner.



37. Reinstall security shade.



38. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.