



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-TCAM07-LED-(All)

Tools Needed:


- ¼" ratchet
- 8, 10 and 12mm socket
- Panel popper



1. Remove (1x) 8mm grocery hook bolt.



2. Unseat & Remove trunk panel.

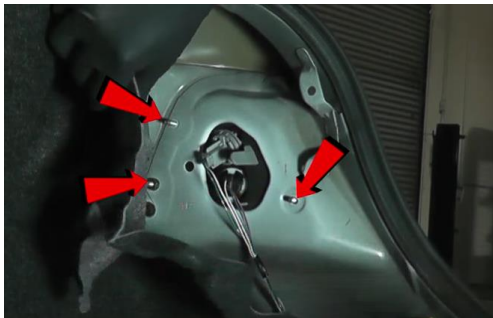


3. Remove (3x) 10mm nuts.



4. Disconnect tail light harness.




5. Remove fascia cap.

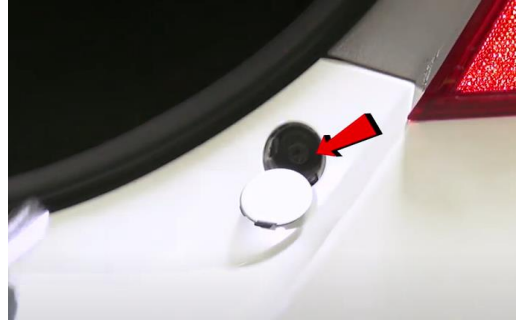

6. Remove (1x) 10mm bolt.




7. Remove (1x) 10mm bolt.

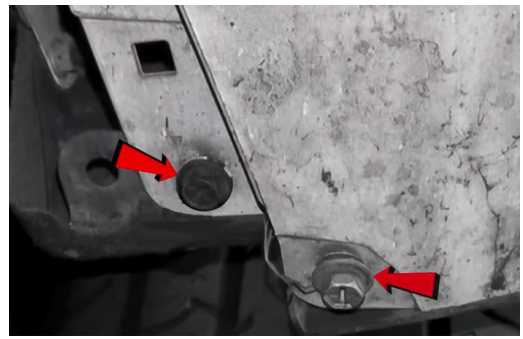

8. Remove (2x) 10mm bolts.



9. Remove (4x) 10mm bolts.

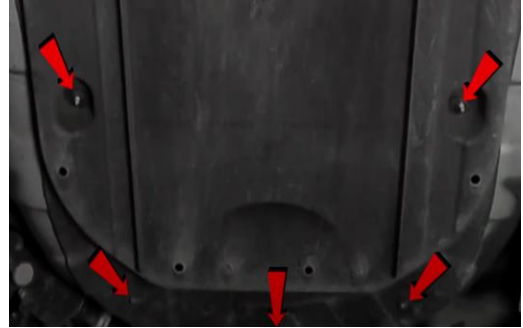

10. Remove (3x) 10mm bolts and (2x) 12mm nuts



11. Unseat bumper fascia.




12. Unseat tail light.




13. Remove (13x) plastic retainers.



14. Remove decklid liner.

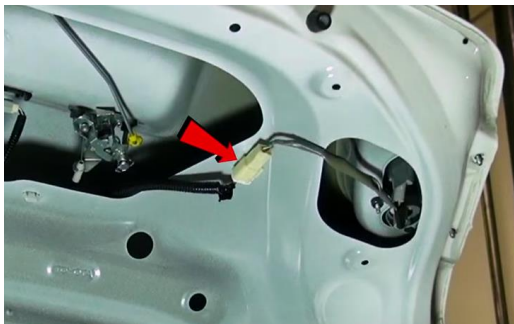

15. Disconnect inner tail light harness.

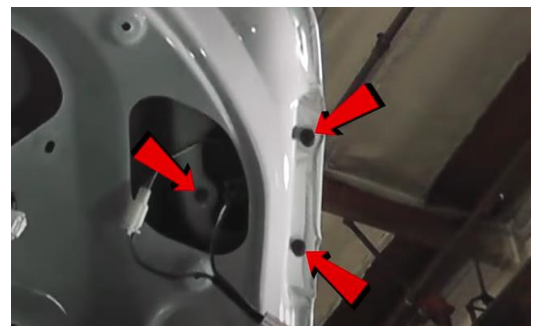

16. Remove (3x) 10mm nuts.



17. Unseat inner tail light.



18. Remove reverse bulb from OEM tail light.
(Never touch bulbs with bare hands)



19. Install bulb into Spyder inner tail light
and reinstall socket.



20. Remove fascia clip from OEM tail light.



21. Remove brake and turn signal socket
from OEM tail light.



22. Install fascia clip onto Spyder tail light.




23. Install turn signal into Spyder tail light.



24. Remove brake bulb from socket and install socket insert. (Align socket insert black wire to black wire of socket)




25. Seat Spyder tail light.

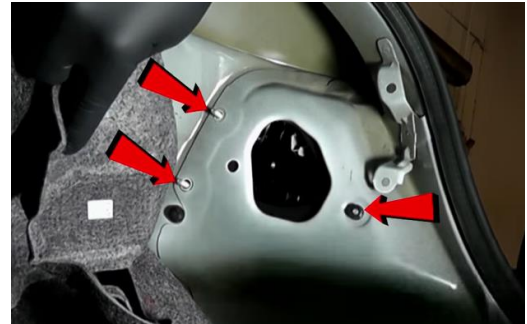


26. Reinstall (3x) 10mm nuts.




27. Reconnect harness.

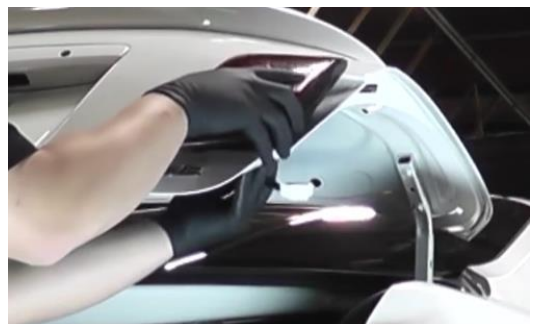

28. Seat Spyder inner tail light.

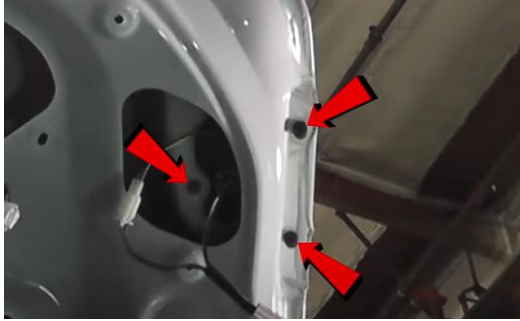

29. Reinstall (3x) 10mm nuts.

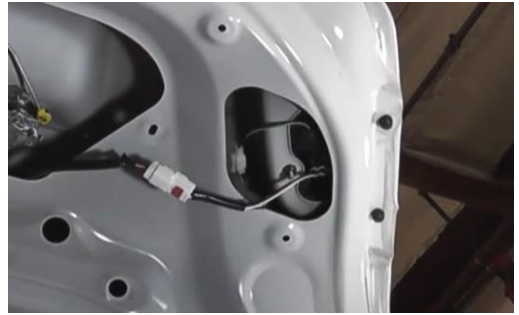

30. Reconnect wire harness.



31. Reinstall trunk panel and grocery hook (1x) 8mm bolt.



32. Reinstall decklid liner.



33. Reinstall (13x) plastic retainers.




34. Seat rear bumper fascia.



34. Reinstall fascia (1x) 10mm bolt and cap.



35. Reinstall (1x) 10mm bolt.

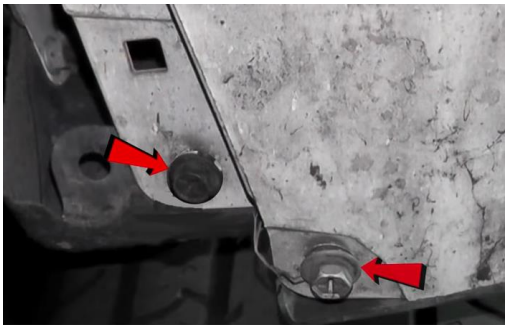

36. Reinstall (2x) 10mm bolts.



37. Reinstall underbody panel and reinstall (7x) 10mm bolts and (2x) 12mm nuts.



38. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.