



SPYDER

INSTALLATION GUIDE: ALT-YD-TT01-LED-(ALL COLORS)

Tools Required Phillips Screwdriver



Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.




1) Remove the four phillips head screws which secure the tail light to the body.



2) Unseat the tail light.




3) Disconnect the tail light wiring harness from the OEM tail light.

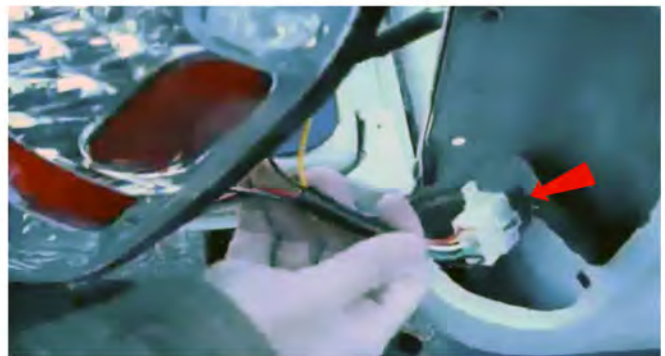

4) Locate your SPYDER tail light. Connect the SPYDER tail light to the OEM tail light wiring harness.



5) Seat the SPYDER tail light.

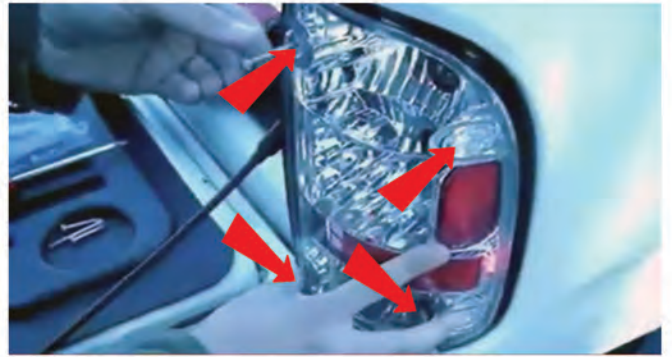

6) Reinstall the four phillips screws to secure the SPYDER tail light.



7) Enjoy your new SPYDER LED tail lights.