




# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: ALT-YD-TT01-LED-(All)

### Tools Needed:

- Phillips screwdriver

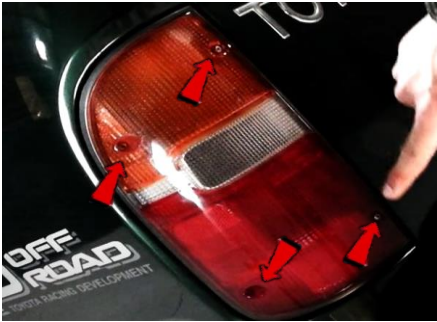

1. Remove (4x) phillips screws.



2. Unseat tail light.



3. Disconnect wire harness.



4. Separate factory tail light and remove reverse light bulb. (Never touch bulbs with bare hands)



5. Transfer bulb to Spyder tail light reverse light socket.



6. Connect Spyder tail light harness.



7. Seat Spyder tail light.



8. Reinstall (4x) phillips screws.



9. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.