




SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-TT05-LED-(All)

Tools Needed:


- ¼" ratchet
- 10mm socket

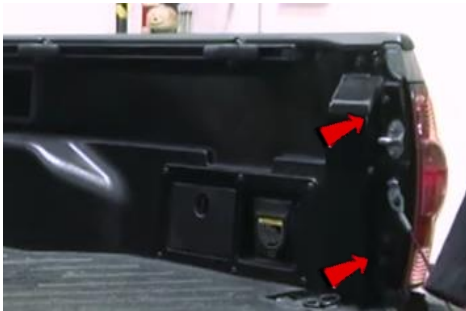

1. Remove (2x) 10mm bolts.




2. Unseat tail light.

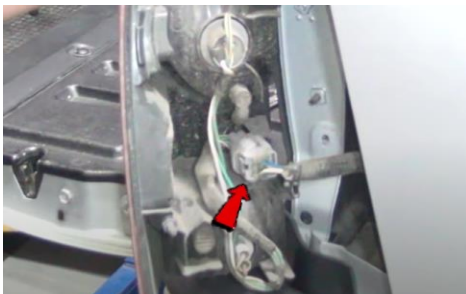


3. Disconnect wire harness.




4. Remove bulb sockets and wiring harness.

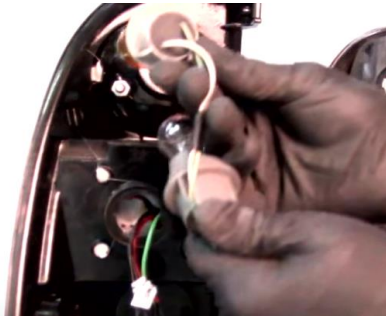

5. Transfer harness to Spyder tail light. Install turn signal socket into Spyder tail light.

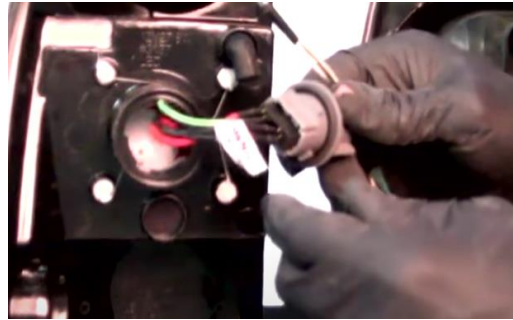


6. Remove brake light bulb and install socket insert. (Align black wire from socket to black wire of socket insert)

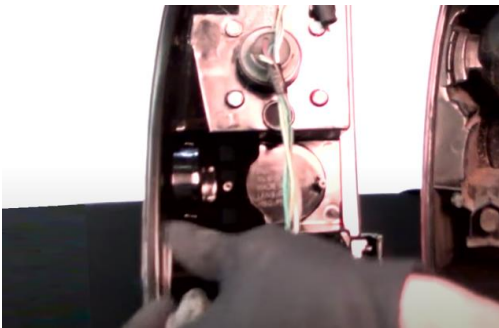


7. Install brake and reverse light bulb sockets onto Spyder tail light.



8. Connect Spyder tail light harness.

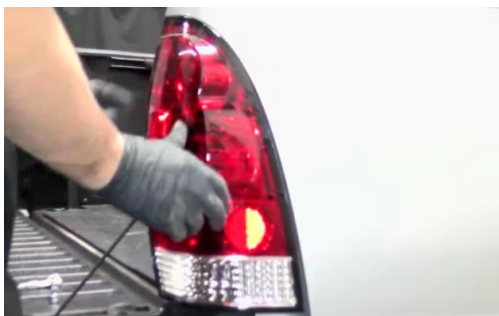

9. Seat Spyder tail light.

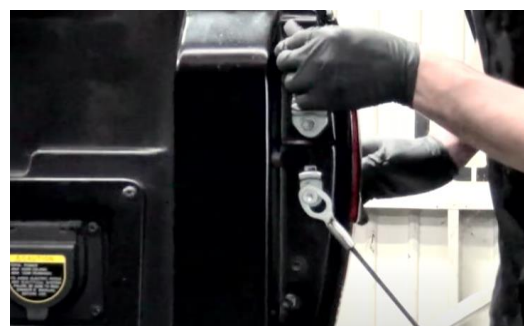

10. Reinstall (2x) 10mm bolts.



11. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.