



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: ALT-YD-TTU14-LED-(All)

### Tools Needed:


- ¼" ratchet
- T30 Torx




1. Remove (2x) T30 torx screws.



2. Unseat tail light.

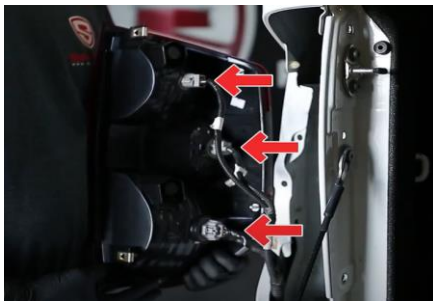

3. Remove (3x) bulb sockets.

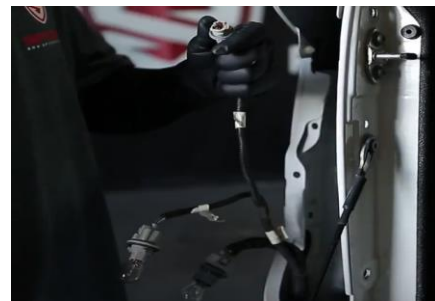

4. Remove top and bottom bulb from bulb socket.



5. Install top and bottom socket insert.  
(Align black wire from socket to black wire of socket insert)



6. Seat (3x) bulb sockets onto Spyder tail light.



7. Seat Spyder tail light.



8. Reinstall (2x) T30 Torx screws.



9. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.