



SPYDER

INSTALLATION GUIDE: ALT-YD-TYA074D-LED-(ALL COLORS)

Tools Required

10mm Socket & Ratchet
Panel Popper



Please Note


If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the trunk.



2) Remove [2x] plastic retainers securing the trunk liner.

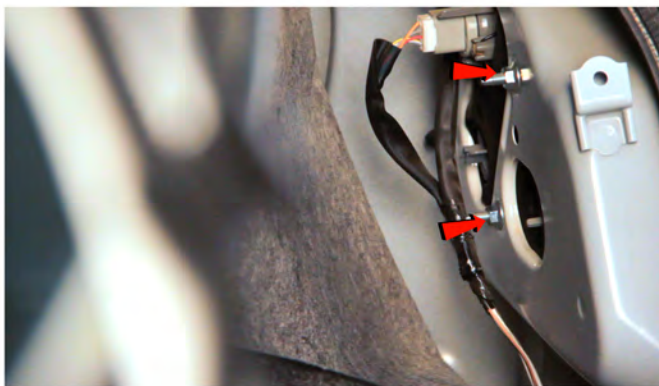

3) Remove [2x] 10mm nuts securing the tail light.




4) Disconnect the tail light harness.



5) Unseat and remove the OEM tail light.



6) Locate the Spyder tail light and feed the wiring harness into the body, then seat the spyder tail light.

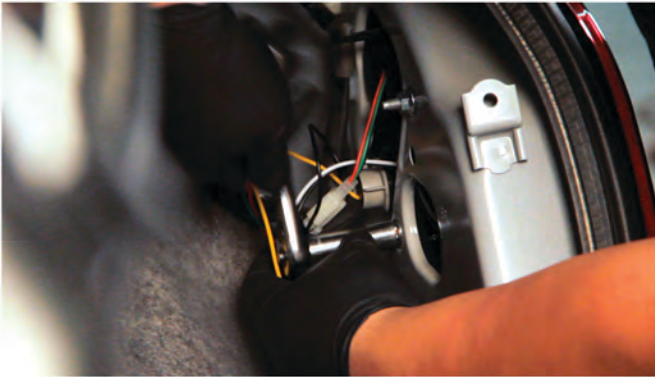

7) Reinstall [2x] 10mm nuts to secure the tail light.



8) Connect the tail light harness.



9) Replace the trunk liner, then reinstall [2x] plastic retainers to secure the liner.



10) Close the trunk and enjoy your new Spyder LED Tail lights.