



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: PRO-YD-AA405-DRL-(All)

### Tools Needed:

- ¼" ratchet
- 10mm socket
- T25 and T30 torx
- Panel popper



1. Remove (3x) T30 torx screws.



2. In wheel well remove (3x) T25 torx screws.



3. Remove (2x) T25 torx screws.



4. Remove (2x) 10mm nuts.



5. Under front bumper remove (3x) T25 torx screws.



6. Remove bumper fascia.



7. Disconnect fog light and side marker harness.



8. Loosen (1x) T30 torx hidden under core support.



9. Remove (1x) T30 torx screw.




10. Loosen (1x) T30 torx screw.



11. Unseat headlight.



12. Disconnect headlight harness.

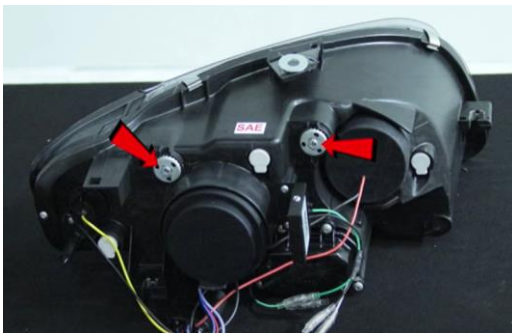

13. Here are Spyder headlight beam adjusters. (Phillips)



14. Connect Spyder headlight harness.



15. Seat Spyder headlight.



16. Tighten inner (1x) T30 torx screw.






17. Locate included washer and place it below headlight bracket and install (1x) T30 screw.



18. Tighten outside (1x) T30 torx screw.



19. Reconnect fog light and side marker harness.

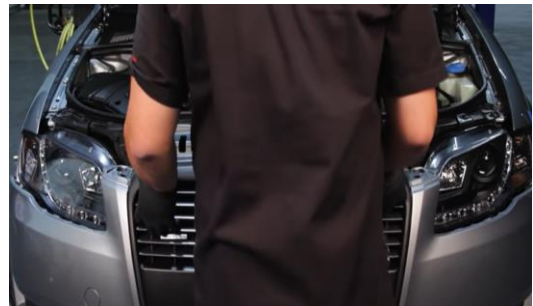

20. Seat bumper fascia.



21. Reinstall (2x) 10mm nuts.



22. Reinstall (2x) T25 torx screws.



23. Reinstall (3x) T25 torx screws.



24. Reinstall (3x) T25 torx screws.



25. Reinstall (3x) T30 torx screws.



26. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.