




SPYDER

WWW.SPYDERAUTO.COM


INSTALLATION GUIDE: PRO-YD-BMWE9208-DRL-(All)

Tools Needed:

- ¼" ratchet
- 8mm and 10mm socket
- Phillips screwdriver
- T30 and T20 Torx

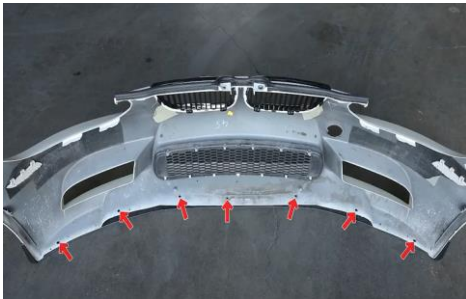

1. Remove (7x) 8mm screws below the front bumper fascia.

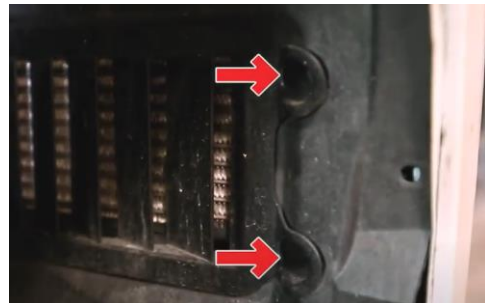

2. Remove (2x) 8mm screws on the passenger side inner fender.



3. Remove (3x) 8mm screws along the edge of the inner fender well.



4. Remove access panel by turning tabs 90 degrees counter clockwise.



5. Remove (2x) 8mm screw on each side of the bumper.



6. Remove (2x) 10mm nuts on the driver side inner fender.



7. Remove (4x) T30 torx bolts securing the bumper.



8. Unseat the front bumper fascia (Check all accessories/fog lights and disconnect prior).



9. Remove (4x) T30 torx screws securing the headlight.



10. Remove 5th T30 torx screw pointing upwards that is hidden behind the upper corner of the headlight.



11. 6th and last headlight screw is located below the headlight.



12. Unseat headlight assembly.



13. Disconnect headlight harness.



14. Remove and transfer over mounting bracket to Spyder headlight by removing (2x) T30 torx bolts.




15. Transfer over OEM HID ballast to Spyder headlight there are (4x) T20 torx screw securing it.




16. Transfer over AFS unit to Spyder headlight there are (4x) T20 torx screws securing it.




17. Secure HID ballast and AFS unit using OEM hardware.

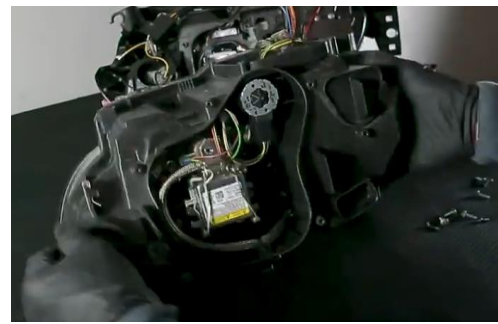

18. Remove plastic cover and remove OEM HID bulb and AFS motor.

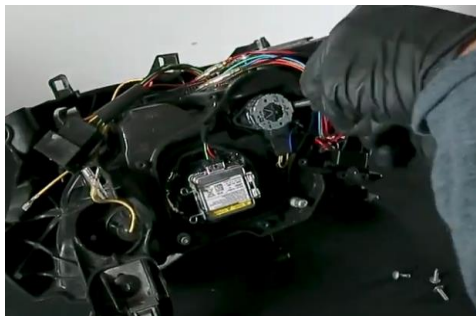


19. Install HID bulb and AFS motor into Spyder headlight (Never touch bulb with bare hands).

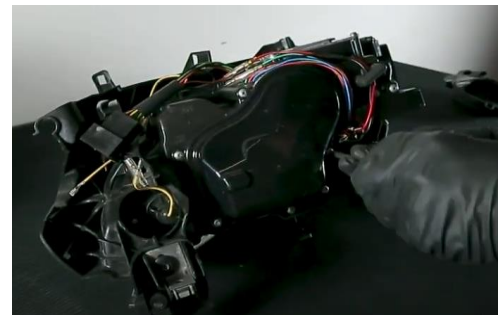

20. Install Spyder cover using supplied hardware.




21. Connect corner light wiring.

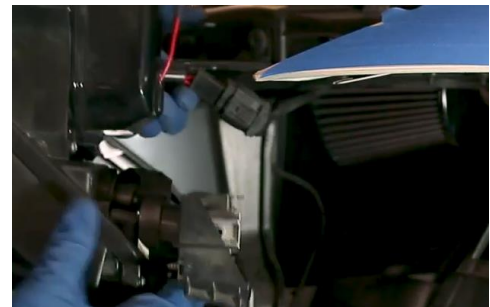

22. Connect Spyder headlight harness.



23. Seat Spyder headlight.

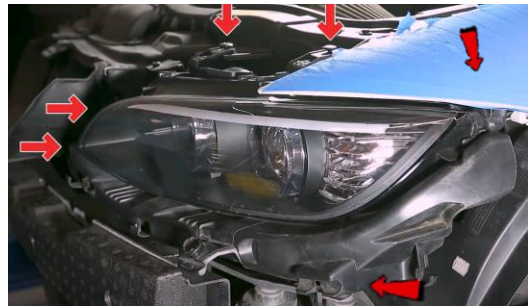

24. Reinstall (6x) headlight screws securing the headlight.




25. Seat the front bumper fascia.



26. Reinstall (2x) 8mm fender screws.



27. Reinstall (4x) T30 torx screws.

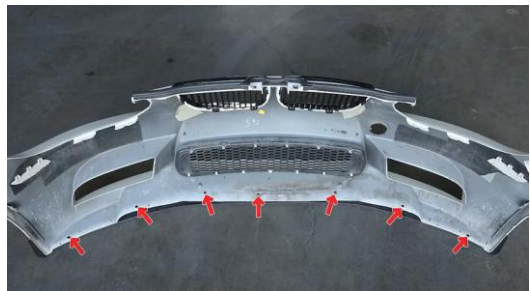

28. Reinstall (7x) 8mm screws.



29. Reinstall fender liner access panels.



30. Reinstall all screw and nuts securing fender liner.



31. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.