




# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: PRO-YD-CCK88-(All)

### Tools Needed:

- ¼" ratchet
- 7mm and 10mm socket
- Phillips screwdriver

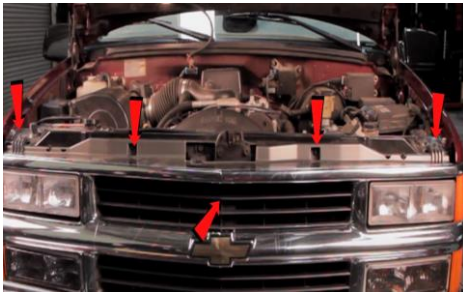

1. Remove (5x) 7mm bolts securing the grill.



2. Remove (4x) phillips screws securing bumper light and signal.



3. Unseat light and remove (2x) light sockets.



4. Locate this tab behind the light securing the grill. Pull up on tab to release grill.




5. Unseat the grill and disconnect corner lights.




6. Locate and remove (4x) 10mm bolts securing headlight.




7. Disconnect high and low beam harnesses.

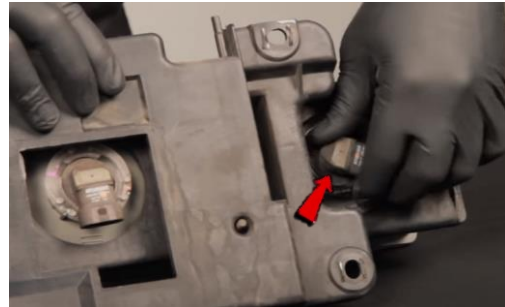

8. Remove high beam bulb from OEM headlight (Never touch bulbs with bare hands).

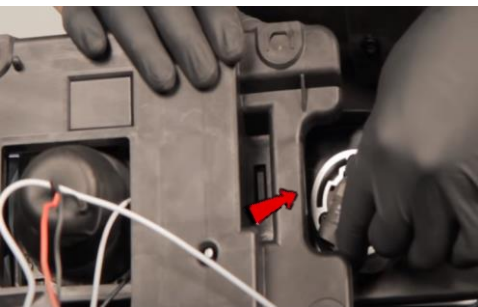

9. Install high beam bulb onto Spyder headlight.

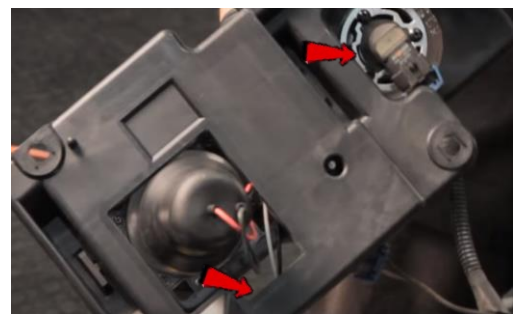

10. Connect low beam harness and route wire under the bracket. Connect high beam bulb harness.



11. Seat Spyder head light and install (4x) 10mm bolts.



12. Reinstall corner light harness and seat the grill.



13. Make sure to carefully pull the bumper signal light bulbs through the opening.



14. Install turn signal bulbs onto turn signal housing.



15. Seat turn signal and reinstall (4x) phillips screws.



16. Reinstall (5x) 7mm bolts securing the grill.



17. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.