




# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: PRO-YD-CCRZ11-DRL-(All)

### Tools Needed:

- ¼" ratchet
- 10mm socket
- T15 Torx
- Panel popper

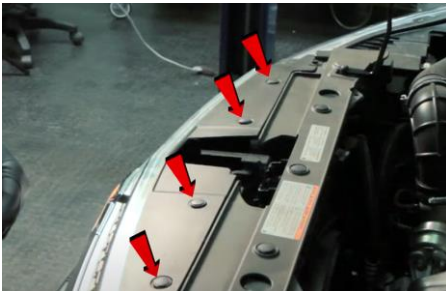

1. Remove (4x) plastic retainers securing the bumper fascia.



2. Remove (2x) 10mm bolts on either side of the grill.



3. Remove (3x) T15 torx screws securing the fender liner.



4. Remove (8x) T15 torx securing the fascia from below.



5. Unseat bumper and disconnect the side marker fog light harnesses.



6. Remove (4x) 10mm bolts securing the headlight.



7. Unseat the headlight.



8. Disconnect headlight and remove turn signal socket.



9. For info on how to wire halos please refer to the Spyder FAQ playlist on the Spyder Auto YouTube channel.



10. Install turn signal socket and connect headlight harness onto Spyder headlight.



11. Seat Spyder headlight.



12. Reinstall (4x) 10mm bolts securing the headlight.



13. Reconnect Fog light and turn signal harness on bumper fascia.



14. Seat the bumper fascia.



15. Reinstall (4x) plastic retainer securing the front bumper fascia.



16. Reinstall (2x) 10mm bolts.



17. Reinstall (8x) T15 torx.



18. Reinstall (3x) T15 torx screws securing fender liner.



19. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.