



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-CE02-DRL-(All)

Tools Needed:

- ¼" ratchet
- 10mm socket
- Panel popper



1. Remove (8x) plastic retainers securing radiator support cover.



2. Remove radiator support cover.




3. Remove (1x) 10mm bolt securing the grill.



4. Release (2x) retainer clips securing the grill.



5. Unseat the grill.

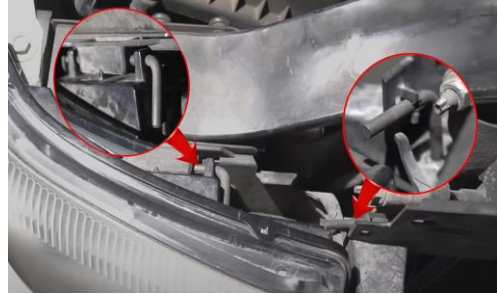


6. Remove (2x) headlight rod pins.



7. Unseat the headlight.



8. Disconnect headlight harness.

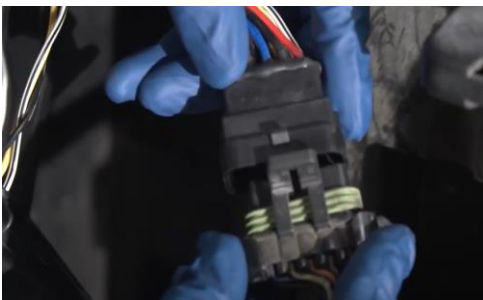

9. Connect Spyder headlight harness.



10. Seat Spyder headlight.



11. Reinstall (2x) headlight pins.



12. Reinstall grill and clip in (2x) grill retainer clips.



13. Reinstall (1x) 10mm bolt securing the grill.



14. Seat radiator support cover.



15. Reinstall (8x) plastic retainers.



16. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.