




SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-CHIP14-LB-(All)

Tools Needed:

- ¼" ratchet
- 7, 10mm socket
- T25, T20, T15 Torx
- Panel popper

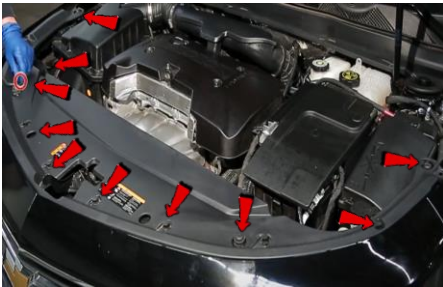


1. Remove (10x) plastic retainers securing the radiator shroud.



2. Remove radiator shroud.



3. Remove (2x) T25 torx screws.

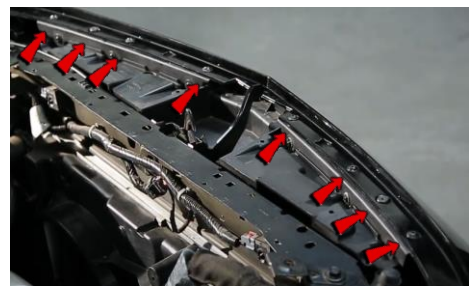

4. Remove (8x) T20 torx screws.



5. Remove (4x) T15 screws securing the fender liner.



8. Remove (1x) 7mm bolt screw.




7. Remove (1x) 10mm bolt securing the bumper fascia to the fender.



8. Unseat front bumper fascia.



9. Under headlight remove (1x) 7mm bolt.

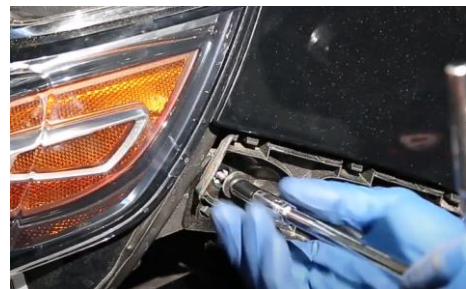

10. Remove (1x) 7mm bolt on side of headlight.



11. Remove (2x) 7mm bolts on top of headlight.



12. Unseat headlight.



13. Disconnect wire harness.



14. Connect Spyder headlight harness.




15. Seat Spyder headlight.



16. Reinstall (4x) 7mm bolts securing the headlight.



17.Seat front bumper fascia.

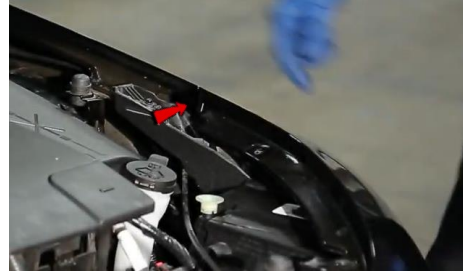

18.Reinstall (1x) 10mm bolt securing bumper to fender.



19.Reinstall (1x) 7mm bolts.



20.Reinstall (4x) T15 torx screws.



21.Reinstall (2x) T25 torx bolts.



22.Reinstall (8x) T20 screws.



23. Reinstall radiator shroud.



24. Reinstall (10x) plastic retainers.



25. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.