

INSTALLATION GUIDE:

PRO-YD-DR09-CCFL-(AII)

Tools Needed:

- ¼" ratchet
- 7mm socket
- Panel popper





1. Remove (6x) plastic retainers using panel popper that secure the cover panel.



2. Remove cover panel.



3. Remove (4x) 10mm bolts securing the grill.



4. Remove grill and set it aside.




5. Remove (2x) 10mm bolts securing the headlight.



6. Open access panel from inside the fender well and remove (1x) 10mm nut from behind the headlight.



7. From access panel push up on retainer tab to release headlight.

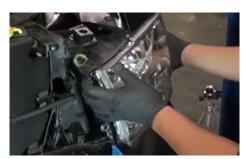

8. Unseat headlight.



9. Remove turn signal socket and disconnect headlight harness.



10. Remove high beam bulb from OEM headlight and install into Spyder headlight (Never touch bulbs with bare hands).



11. For info on how to wire halos please refer to the Spyder FAQ playlist on the Spyder Auto YouTube channel.



12. Install turn signal socket and connect headlight harness to Spyder headlight.



13. Seat Spyder headlight.



14. Reinstall (2x) 10mm bolts securing the Spyder headlight.



15. Lock retainer slider and reinstall (1x)
10mm nut threw the access panel
behind the headlight. Close access panel
when done.



16. Seat grill and reinstall (4x) 10mm bolts.



17. Replace cover panel and install (6x) plastic retaining clips.



18.Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more information:

http://www.youtube.com/watch

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.