



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-DR09-LBDRL-(All)

Tools Needed:


- ¼" ratchet
- 7mm socket
- Panel popper



1. Remove (4x) plastic retainers using panel popper that secure the radiator shroud.




2. Remove shroud.

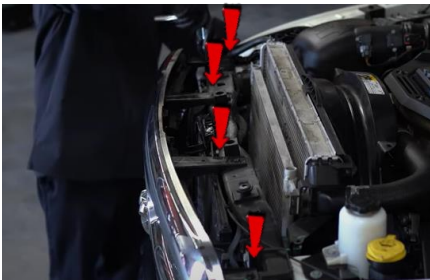

3. Remove (4x) 10mm bolts securing the grill.



4. Remove grill and set it aside.

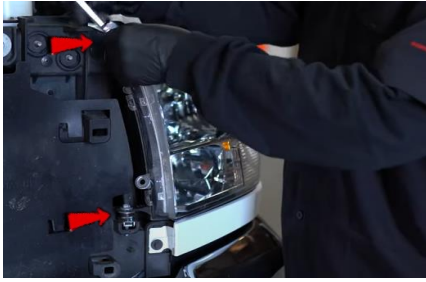

5. Remove (2x) 10mm bolts securing the headlight.



6. Open access panel from inside the fender well and to access retainer tab.



7. From access panel push up on retainer tab to release headlight.



8. Unseat headlight.



9. Remove turn signal socket and remove bulb. Next disconnect headlight harness.



10. Remove high beam bulb from OEM headlight and install into Spyder headlight (Never touch bulbs with bare hands).



11. Connect Spyder headlight harness.



12. Install brake socket insert. (Align black wire from socket to black wire of socket insert). Install bulb socket onto Spyder headlight



13. Seat Spyder headlight.



14. Reinstall (2x) 10mm bolts securing the Spyder headlight.



15. Lock retainer slider through the access panel behind the headlight. Close access panel when done.



16. Seat grill and reinstall (4x) 10mm bolts.



17. Replace radiator shroud and install (4x) plastic retaining clips.



18. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.