



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-FF15018-LB-(All)

Tools Needed:

- ¼" ratchet
- 7, 8 and 10mm socket
- Panel popper
- T25 Torx



1. Using panel popper remove (14x) plastic retainers securing the radiator shroud.



2. Remove radiator shroud and set it aside.



3. Disconnect (2x) sensor clips connected to grill.



4. Remove (4x) 10mm bolts securing the grill.



5. Remove (2x) 7mm bolts securing bumper trim on each side.



6. Remove bumper trim.



7. Remove (2x) 7mm bolts securing grill.



8. Remove grill and set aside.



9. Remove (1x) 8mm and (3x) 10mm bolts securing the headlight.



10. Remove (1x) plastic retainer and (2x) 10mm bolts securing the headlight.



11. Unseat the headlight.



12. Disconnect (2x) headlight clips and remove turn signal socket.




13. Remove (3x) T25 torx and transfer bracket to Spyder headlight.



14. Connect (2x) headlight clips and install turn signal socket onto Spyder headlight.



15. Seat Spyder headlight.

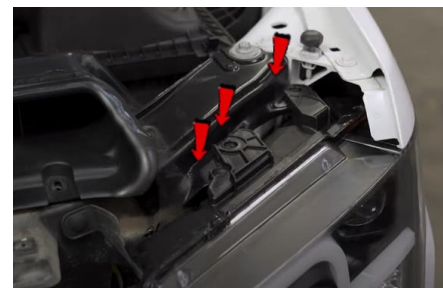

16. Reinstall (1x) plastic retainer and (2x) 10mm bolts securing the headlight.



17. Reinstall (1x) 8mm and (3x) 10mm bolts securing the bottom of the Spyder headlight.



18. Reinstall grill securing it with (2x) lower 8mm bolts and (4x) upper 10mm bolts.



19. Reinstall bumper trim and (2x) 7mm bolts securing each side.



20. Reinstall (2x) sensor slips onto grill.



21. Reinstall radiator shroud and (14x) retaining slips.



22. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.