




# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: PRO-YD-FM2010V2-(All)

### Tools Needed:

- ¼" ratchet
- 7,8 and 10mm socket
- Panel popper

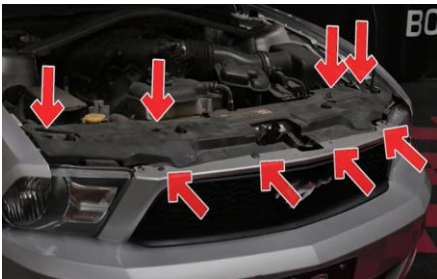

1. Remove (8x) plastic retainer securing the radiator shroud and remove shroud.



2. Remove (2x) 7mm bolts securing the fender liner on each side of the bumper fascia.



3. Below the bumper remove (4x) 7mm screws.



4. Remove (2x) 8mm bolts.



5. Unseat bumper fascia and disconnect corner lights.



6. Remove (2x) 10mm bolts below the headlight.



7. Remove (1x) 10mm bolt above the headlight.




8. Remove (1x) plastic retainer.



9. Unseat the headlight.




10. Disconnect (2x) headlight harnesses.

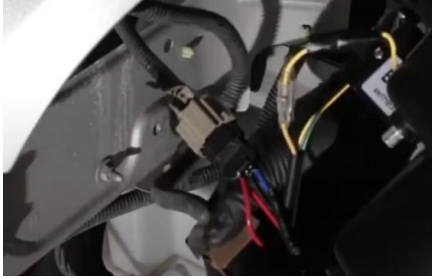

11. Connect Spyder headlight harnesses.



12. Seat Spyder headlight.

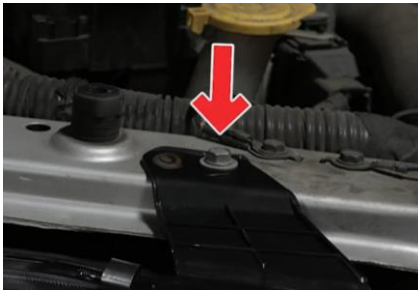


13. Reinstall (1x) 10mm bolts and plastic retainer.



14. Reinstall (2x) corner light harnesses and seat front bumper fascia.



15. Reinstall (2x) 10mm bolts securing the front bumper fascia.

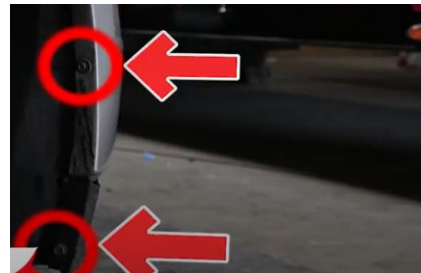

16. Reinstall (2x) 7mm bolts securing the fender liner on each side of the bumper.



17. Reinstall (4x) 7mm screws under the bumper fascia.



18. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.