



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-P98705-DRL-(All)

Tools Needed:

- Phillip's Screwdriver



1. Unlock and open factory storage compartment door to locate factory tools.



2. Get the factory hex tool.



Unlock plastic inner fender liner screw.



4. Pull back liner to access headlight release access hole.



5. Insert factory hex tool, twist to release headlight.



6. Unseat and remove headlight.



7. Remove (4x) Philips screws from back of factory headlight.



8. Release (3x) clips securing back cover.



9. Remove factory headlight bulb for install onto Spyder headlight.



10. Remove (5x) Philips screw from behind Spyder headlight.




11. Install bulb onto Spyder headlight and reinstall (5x) Philips screw and cover.



12. For info on how to wire halos please refer to the Spyder FAQ playlist on the Spyder Auto YouTube channel.



13. Seat Spyder headlight.

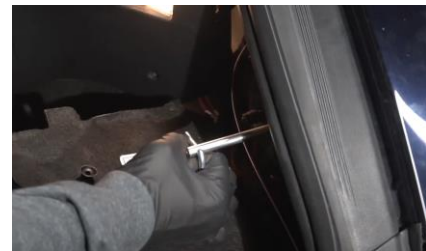

14. Using hex tool lock headlight into place.



15. Reinstall fender liner and lock fender liner screw.



16. Return factory tool box to storage compartment.



17. Close factory tool box compartment and secure.



18. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

W W W . S P Y D E R A U T O . C O M

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.