



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-PCAY03-HID-DRL-(All)

Tools Needed:

- ¼" ratchet
- T15 Torx
- Factory hex wrench



1. Get factory hex tool from spare tire compartment in the rear of the vehicle.




2. Remove headlight release cover under the hood.




3. Using factory tool turn wrench clockwise to release the headlight.



4. Unseat and remove the headlight.

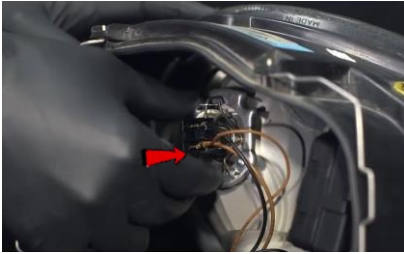

5. Open rear cover on factory headlight and remove low beam headlight bulb.

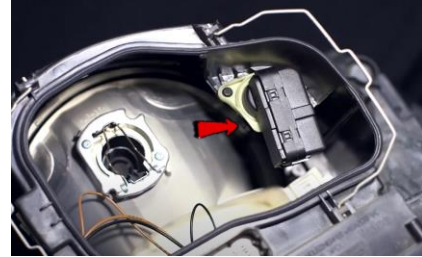


6. Remove (2x) T15 torx screws and remove auto adjust motor from factory headlight.



7. Remove (6x) Philips screws from back of Spyder headlight.



8. Install factory low beam bulb onto Spyder headlight and connect.

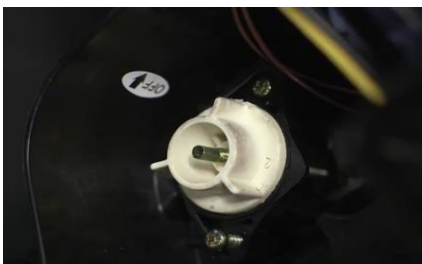

9. Remove (2x) Philips screws securing dummy adjustment motor from Spyder headlight.



10. Attach Spyder socket and factory adjustment motor to use to install adjustment motor on Spyder headlight.



11. Finished Adjustment motor for Spyder Headlight.



12. Install auto adjustment motor onto Spyder headlight and reinstall cover along with (6x) Philips screws.



13. Seat Spyder headlight and reconnect headlight harness.



14. Using factory tool turn wrench counter clockwise to secure the Spyder headlight.



15. Reinstall headlight release cover.



16. Place factory tool back into factory location.



17. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.