



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-SWRX08-HID-LBDRL-(All)

Tools Needed:

- ¼" ratchet
- 10mm socket
- Phillips Screwdriver
- Panel popper



1. Remove (2x) plastic fasteners holding the intake duct with panel popper.



2. Remove intake duct.



3. Remove (4x) plastic fasteners using panel popper.



4. Remove (3x) plastic fasteners securing the inner fender liner.



5. Below the bumper fascia remove (6x) fasteners securing the bumper.



6. Carefully pull-on edges of bumper fascia to unclip and remove bumper fascia.



7. Unplug fog light harness.




8. Remove (2x) 10mm bolts securing outside corner of headlight.



9. Remove (2x) 10mm bolts on inside corner of headlight.



10. Reinstall (2x) 7mm bolts.

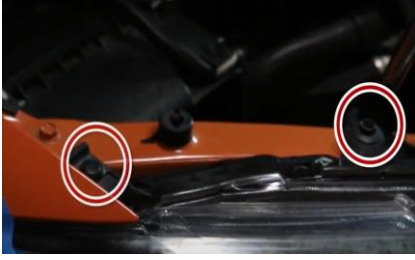

11. Remove (1x) 10mm bolt and (1x) plastic clip securing top of headlight.



12. Unseat headlight.



13. Unplug (4x) harnesses from rear of headlight.



14. Remove factory headlight ballast by removing (3x) Philips screws and unclipping harness from inside.



15. Remove headlight cover from rear of headlight.




16. Remove AFS motor by unscrewing all the way out using 10mm socket.




17. Remove (1x) Philips screw holding ground strap to bulb holder. Twist and remove harness from bulb.



18. Remove grounding strap by pulling it off the connector.

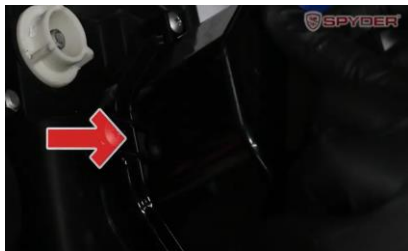

19. Unscrew and remove low beam cover from rear of Spyder headlight.

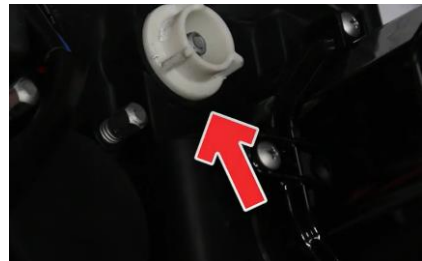

20. Remove manual headlight adjuster from Spyder headlight.




21. Carefully remove HID bulb from factory headlight and install onto Spyder headlight.



22. Install HID ignitor harness onto Spyder headlight.



23. Install HID ballast onto Spyder headlight.

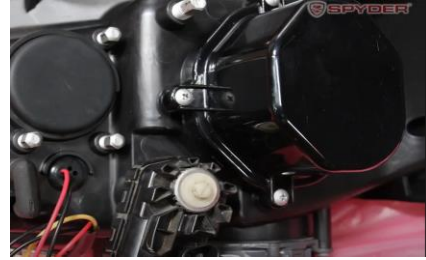

24. Install AFS motor and low beam cover onto Spyder headlight.



25. Remove lower bracket from OEM headlight and install onto Spyder headlight.



26. Seat Spyder headlight and reconnect (4x) headlight harnesses.



27. Reinstall (1x) 10mm bolt and (1x) plastic clip securing top of headlight.



28. Seat Spyder headlight and reconnect (4x) headlight harnesses.



29. Install (2x) outer 10mm bolts securing the headlight.



30. Install (2x) inner 10mm bolts securing the headlight.



31. Reinstall front bumper fascia and fog light harnesses.



32. Reinstall intake duct.



33. Reinstall (6x) plastic retainers securing the bumper and intake duct.



34. Reinstall (6x) retainers securing low part of bumper fascia.



35. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

W W W . S P Y D E R A U T O . C O M

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.