



# SPYDER

WWW.SPYDERAUTO.COM

## INSTALLATION GUIDE: PRO-YD-TT05-CCFL-(All)

### Tools Needed:

- ¼" ratchet
- 10mm socket
- Phillips Screwdriver
- Panel popper



1. Remove (2x) push-type plastic retainers.



2. Remove (2x) Philips screw.




3. Remove grill.



4. Remove (1x) plastic retainer.



5. Remove (3x) Philips screws securing fender liner.

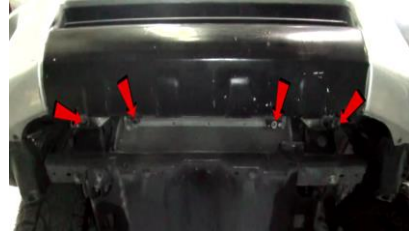

6. Remove (4x) plastic retainers securing bottom of bumper fascia.



7. Remove (3x) plastic retainers securing top of bumper fascia.



8. Unseat bumper fascia. (If equipped disconnect fog light harnesses)




9. Remove (4x) 10mm bolts securing the headlight.



10. Remove headlight garnish.



11. Unseat the headlight.

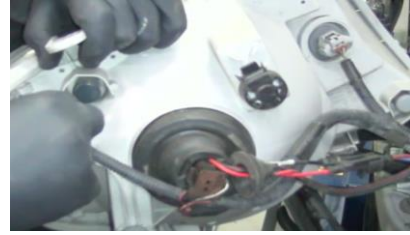

12. Disconnect headlight, side marker and turn signal harnesses.



13. Disconnect low beam, high beam and side marker harnesses.



14. Remove turn signal socket and side marker socket from OEM headlight and install onto Spyder headlight.



15. For info on how to wire halos please refer to the Spyder FAQ playlist on the Spyder Auto YouTube channel.



16. Connect headlight, side marker and turn signal harness onto Spyder headlight.



17. Seat Spyder headlight.



18. Reinstall (4x) 10mm bolts securing the Spyder headlight.



19. Reinstall headlight garnish and (1x) retaining clip.



20. Seat front bumper fascia. (Reconnect fogs light harnesses)



21. Reinstall (3x) plastic retainers.



22. Seat grill and reinstall (2x) plastic retainers and (2x) Philips screws securing the grill.



23. Reinstall (3x) Phillips screws.



24. Reinstall (4x) plastic retainers securing the bumper fascia.



25. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



# SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more  
information:

<http://www.youtube.com/watch>

## **DISCLAIMER**

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.