



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-TTC08-HL-(All)

Tools Needed:

- ¼" ratchet
- 10mm socket
- Phillips Screwdriver
- Panel popper



1. Remove (5x) plastic retainers using the panel popper.



2. Remove (2x) 10mm bolts below the bumper fascia.



3. Remove (1x) plastic retainer securing lower corners of bumper fascia.




4. Remove (1x) 10mm bolt on either corner of the bumper fascia.



5. Unseat the bumper fascia.



6. Remove (3x) 10mm bolts securing the headlight.

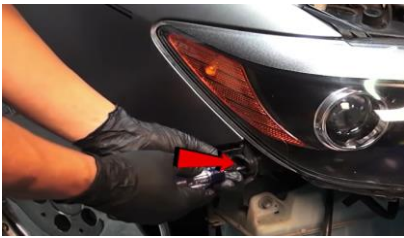

7. Remove (1x) Philips screw.



8. Unseat headlight.



9. Disconnect low beam and high beam harnesses. Remove turn signal socket.



10. Remove bumper bracket below headlight and install onto Spyder headlight.



11. Remove city light and side marker harness and install onto Spyder headlight.



12. Install low beam, high beam and side marker harnesses onto Spyder headlight.



13. Install turn signal socket and harness onto Spyder headlight.



14. Seat Spyder headlight.



15. For info on how to wire halos please refer to the Spyder FAQ playlist on the Spyder Auto YouTube channel.



16. Reinstall (3x) 10mm bolts and (1x) Phillips screw securing Spyder headlight.



17. Seat bumper fascia.



18. Reinstall (3x) plastic retainers. Note you will not use the 2 smaller retainers anymore.



19. Reinstall (1x) 10mm bolts on either corner of the bumper fascia.



20. Reinstall (2x) 10mm bolts and (1x) plastic retainer on either corner of the lower bumper fascia.



21. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.