




SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: PRO-YD-TTU14-DRL-(All)

Tools Needed:


- ¼" ratchet
- 10mm socket
- Panel popper

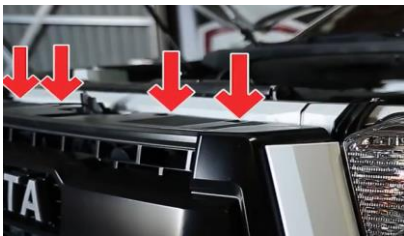

1. Remove (4x) 10mm bolts above the grill and (2x) plastic retainers.



2. Unseat grill.

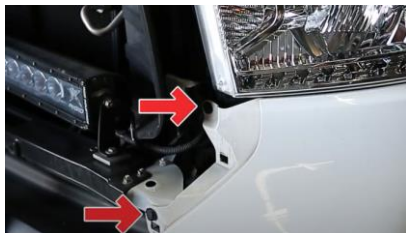

3. Remove (2x) plastic retainers.



4. Remove headlight garnish.



5. Remove (3x) 10mm bolts securing the headlight.



6. Unseat the headlight.



7. Disconnect headlight and side marker harness. Remove turn signal socket.



8. Remove side marker bulb from socket and install onto Spyder headlight.



9. Connect headlight and side marker harness onto Spyder headlight. Install turn signal socket.



10. Seat Spyder headlight.



11. Reinstall (3x) 10mm bolts securing the Spyder headlight.



12. Install headlight garnish and reinstall (2x) plastic retainers.



13. Seat the grill.



14. Reinstall (4x) 10mm bolts above the grill and (2x) plastic retainers.



15. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder Headlights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.
Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.