



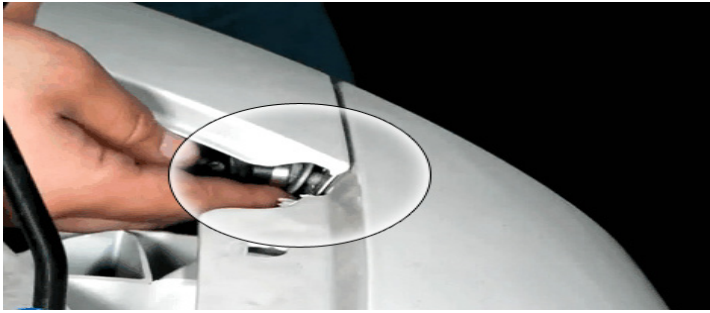

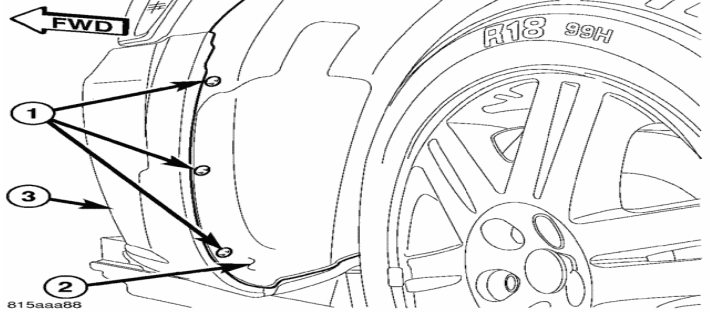
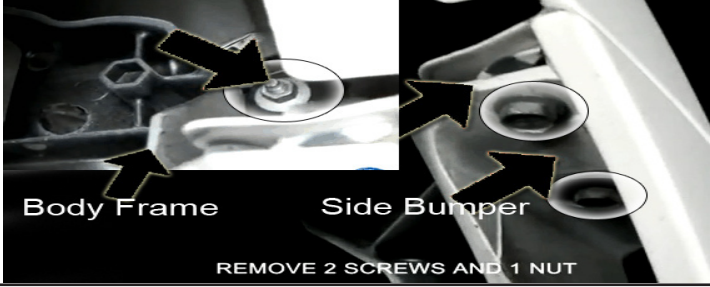

INSTALLATION GUIDE:

1 Piece 2006-2009 Dodge Charger Headlight with L.E.D. Installation Guide

SPYDER

Parts Identification:			TOOLS REQUIRE	
One Piece Headlight with L.E.D.'s			10mm and 7mm Socket	
Back Headlight: Turn Signal, Low beam, High Beam, and L.E.D.			Panel Popper	
Headlight with Mounting bracket. There are 4 bolts holding the headlight from the mounting bracket.				
Front and Back View of Mounting Bracket				
4 bolts to hold the headlights onto the mounting brackets.				

STEP 1: REMOVING BUMPER

<p>Open the hood, there are 8 clips to remove on the top of the front bumper. Use a panel popper and carefully remove the clips.</p>	
<p>Remove the Screw that is holding the Fender, using a 10mm socket. On both ends</p>	
<p>Remove the nine screws that secure the belly pan to the underbody using a 7mm socket.</p>	
<p>Turn the wheel away and remove three clips from the wheel cover. On both ends of the vehicle.</p>	
<p>Once you remove the wheel cover, there are two screws on the each side of the bumper (side bumper). Then remove one nut on both sides in order to remove the bumper off (body frame).</p>	
<p>Before removing the bumper, remove the corner bumper lights on both side. Push it out carefully, it should slide out.</p>	

STEP 2: Removing Bumper/Install Bracket/Headlight

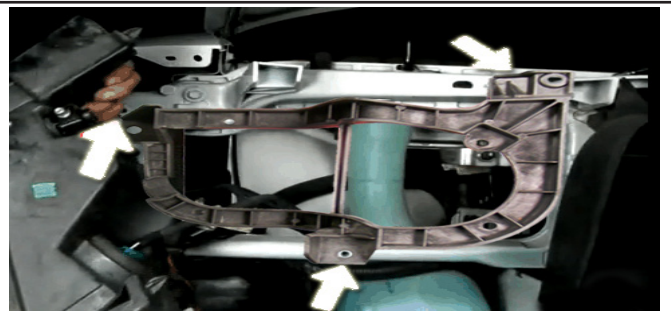
The front bumper should come off easily from the frame.



Remove the headlight assembly from the vehicle. There are three screws, two on the top, and one on the bottom of the headlight.



Install the Mounting Bracket first onto the car, align the screws where you mount the OEM Headlights. (as shown)



After installing the mounting bracket for both side, put the front bumper back on the car. Bolt all the screws back on the bumper.



Install the Low Beam, High Beam, and turn signal onto the new headlight. The L.E.D. wires are connected to the Corner Bumper lights. The new headlight should slide thru the bumper onto the mounting bracket.



Once you align the screw to the mounting bracket, bolt the screws back on using a 10mm socket. There are four mounting point behind the headlight.



STEP:3 FINISHING

Once the headlight have been bolt on, check for all the light function. Make sure all lights are working properly.



You've just installed Dodge Charger 1-Piece L.E.D. Headlight to your vehicle.



SPYDER