



# SPYDER

## INSTALLATION GUIDE: PRO-YD-CCOB05-(ALL COLORS)

### Tools Required

10mm Socket & Ratchet  
Panel Popper



*\*Please Note\**

If you are unfamiliar with the installation processes,  
professional installation is highly recommended.




1) Open the hood. Remove [6x] plastic retainers  
securing the fascia.



2) Remove [2x] 10mm bolts securing the headlight.



3) Unseat the headlight.

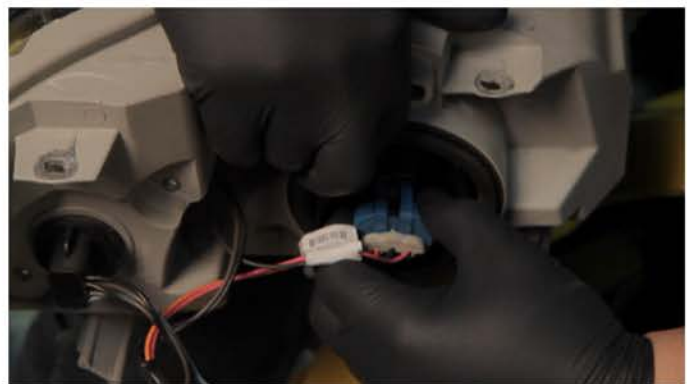

4) Disconnect the headlight harness.



5) Remove the turn signal socket from the headlight.



6) Remove the city light socket from the headlight.



7) The beam adjusters are shown here and are 8mm. For information on wiring the halos, watch "How To Wire Halos" on the Spyder FAQs playlist on the Spyder Auto YouTube channel.



8) Reinstall the city light socket into the Spyder headlight.



9) Reinstall the turn signal socket into the Spyder headlight.



10) Reconnect the headlight wiring harness.



11) Seat the Spyder headlight.



12) Reinstall [2x] 10mm bolts to secure the headlight.



13) Reinstall [6x] plastic retainers to secure the fascia.



14) Close the hood and enjoy your new Spyder projector headlights.