



SPYDER

INSTALLATION GUIDE: PRO-YD-CHIP00-(ALL COLORS)

No Tools Required

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the hood.



2) Remove [2x] plastic pull tabs securing the headlight.



3) Unseat the headlight.



4) Disconnect the headlight wiring harness.


We offer direct replacement factory headlights, as well as a huge selection of custom headlights in your choice of styles and lighting options.



5) Remove the turn signal socket, then remove the turn signal bulb from the socket. You must transfer this bulb to the Spyder headlight. Never touch exposed bulbs with bare hands.



6) Your beam adjusters are marked here and are 8mm. For information on wiring Halos, watch How To Wire Halos on the Spyder FAQs Playlist on the Spyder Auto YouTube channel.

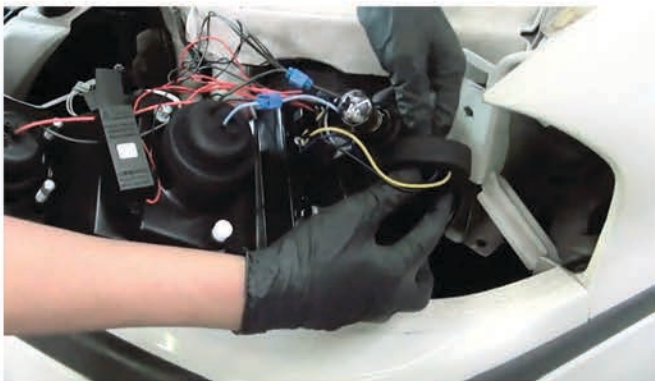

7) Install the turn signal bulb into the turn signal socket of the Spyder headlight. Then reinstall the socket and reinstall the seal securely to prevent condensation issues.



8) Connect the Spyder headlight to the headlight wiring harness.



9) Seat the Spyder headlight, then reinstall [2x] plastic pull tabs to secure the headlight.



10) Close the hood and enjoy your new Spyder headlights.