



# SPYDER

## INSTALLATION GUIDE: PRO-YD-CHIP06-(ALL COLORS)

### Tools Required

7mm Socket + Ratchet  
Panel Popper




*\*Please Note\**

If you are unfamiliar with the installation processes,  
professional installation is highly recommended.



1) Open the hood and remove [4x] plastic retainers  
securing the top edge of the fascia for clearance.

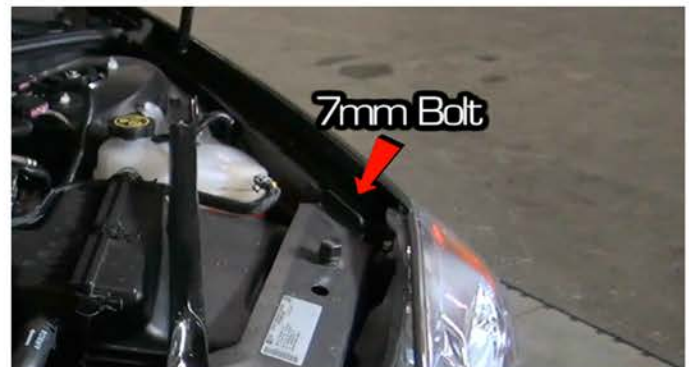


2) Remove [1x] 7mm bolt securing the corner of the  
headlight.




3) Remove [1x] plastic pull tab securing the  
headlight.



4) Unseat the headlight.

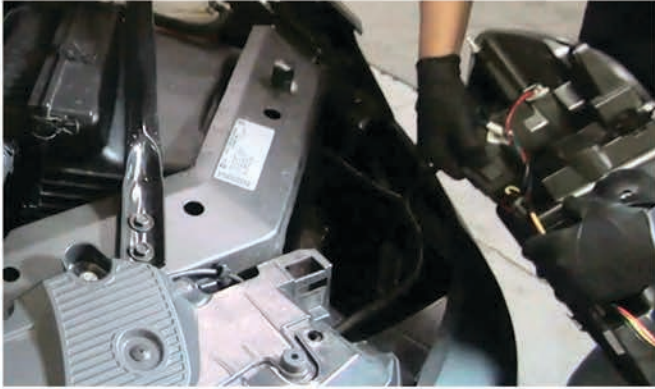

5) Disconnect the headlight harness.

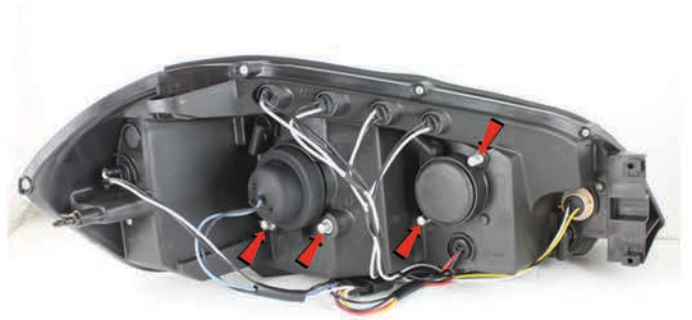

6) Your beam adjusters are marked here and are 8mm.



7) Connect the headlight harness to the Spyder headlight.



8) Seat the Spyder headlight.



9) Reinstall [1x] plastic pull tab.



10) Reinstall [1x] 7mm bolt to secure the headlight.



11) Reinstall [4x] Plastic retainers.



12) Close the hood and enjoy your new Spyder headlights.