



SPYDER

INSTALLATION GUIDE: PRO-YD-CS99-(ALL COLORS)


Tools Required No Tools Required

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.




1) Open the hood.

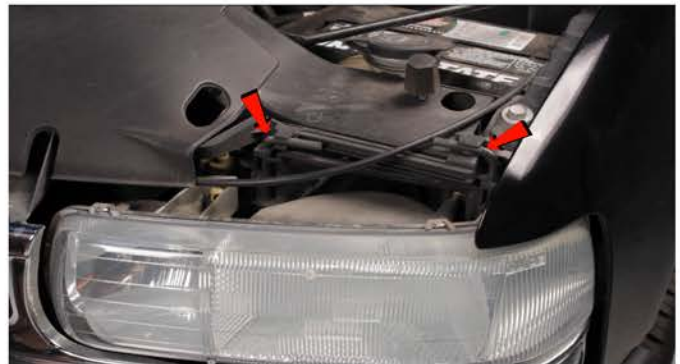

2) Unlock the two retainer stakes by swinging them outward, then pull them up to release the headlight.



3) Unseat the OEM head light.

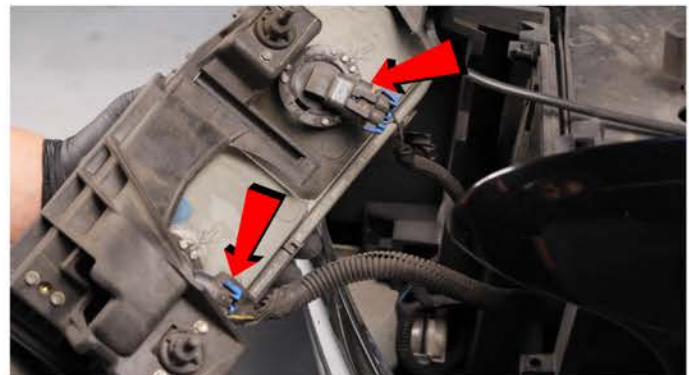


4) Disconnect the high beam and low beam wiring harnesses.



5) Remove the high beam bulb from the OEM headlight. Never touch exposed bulbs with bare hands.



6) Transfer the high beam bulb to your Spyder headlight.

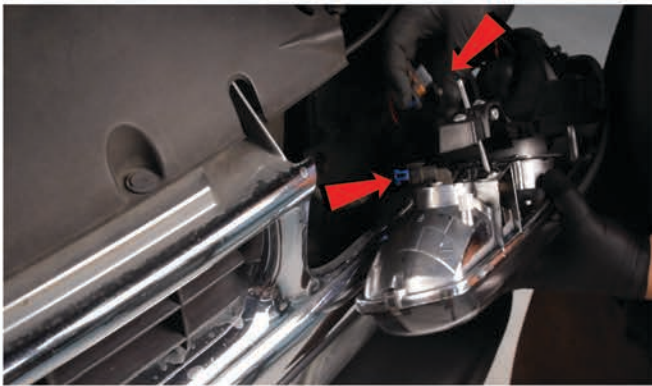

7) Connect the high beam and low beam harnesses to your Spyder headlight.



8) Seat the Spyder headlight.



9) Reinstall the two retainer stakes by pushing them down through the holes, then lock them into place.



10) Close the hood and enjoy your new Spyder headlights.