



# SPYDER

## INSTALLATION GUIDE: PRO-YD-DR02-(ALL COLORS)

### Tools Required

10mm Socket wrench/ratchet  
Phillips Head Screwdriver

*\*Please Note\**

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the hood. Remove the two 10mm bolts securing the headlight.




2) Remove the hidden 10mm just below the turn signal area.




3) Remove the single Phillips head screw securing the headlight weatherstrip to the body.



4) Unseat the headlight by gently pulling it forward.

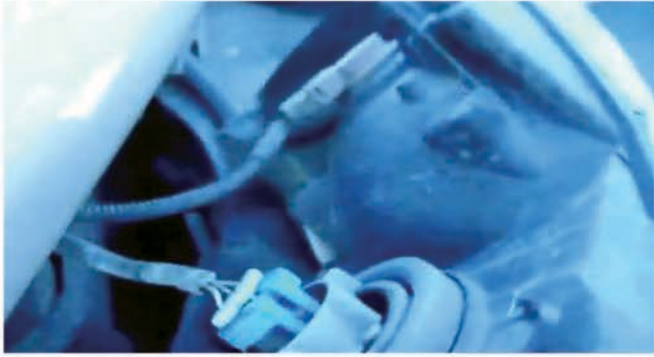

5) Remove the headlight bulb socket and turn signal bulb socket from the OEM headlight assembly. Remove and discard the headlight bulb, but leave the turn signal bulb in place.

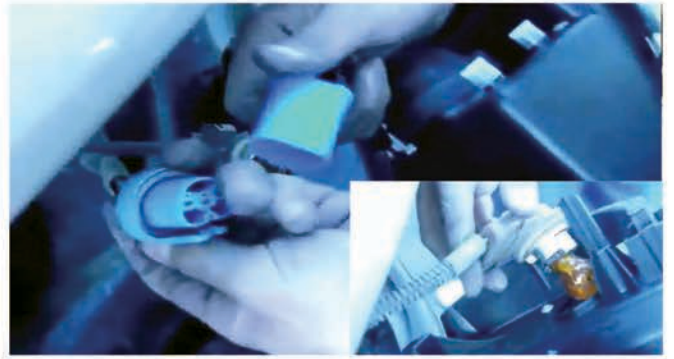

6) Locate your SPYDER headlight. Connect the SPYDER headlight harness to the headlight bulb socket. Install the turn signal socket into the SPYDER housing.



7) Seat the SPYDER headlight.



8) Reinstall the three 10mm bolts that secure the headlight and then reinstall the phillips head screw that secures the headlight weatherstrip.



9) Close the hood and enjoy your new SPYDER headlights.