



# SPYDER

## INSTALLATION GUIDE: PRO-YD-FF15097-1P-(ALL COLORS)

### Tools Required

Flathead Screwdriver



**\*Please Note\***

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the hood. Remove the flathead screw securing the corner lamp.



2) Pry out the corner lamp, then remove the turn signal socket and remove the corner lamp assembly and set it aside.



3) Pull the two headlight retainer tabs UP to release the headlight.



4) Unseat the headlight by pulling it forward, then remove the headlight socket. Then set the headlight aside.


We offer direct replacement factory headlights, as well as a huge selection of custom headlights in your choice of styles and lighting options.



5) Locate your SPYDER headlight. Install the headlight bulb/socket and the turn signal bulb/socket.



6) Seat the SPYDER headlight.

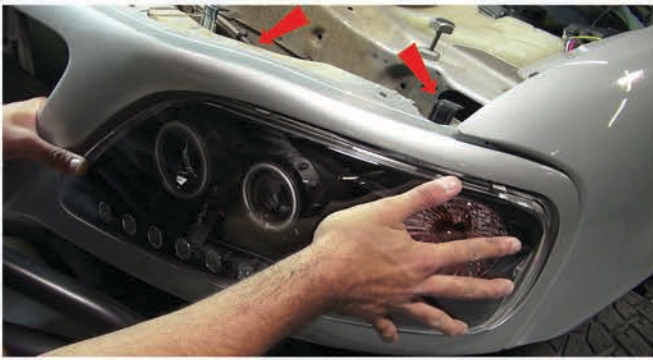

7) Push down on the two headlight retainer tabs.



8) Enjoy your new SPYDER headlights.