



SPYDER

INSTALLATION GUIDE: PRO-YD-PG97-1P-(ALL COLORS)

Tools Required

10mm Socket & Ratchet
Phillips Screwdriver

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the hood. Remove two 10mm Bolts securing the headlight assembly.



2) Pull the headlight outward to unseat it. Remove all bulb sockets.



3) Remove the Phillips head screw shown to remove the bracket, freeing the wiring harness. You can then set the OEM headlight aside.




4) The headlight bulb is must be removed in order to connect the new SPYDER headlight. Remove the headlight bulb from its socket by releasing the harness clip.



5) Locate SPYDER headlight. Install turn signal bulb and side marker bulb sockets.



6) Connect the SPYDER headlight harness to the OEM headlight socket connector.

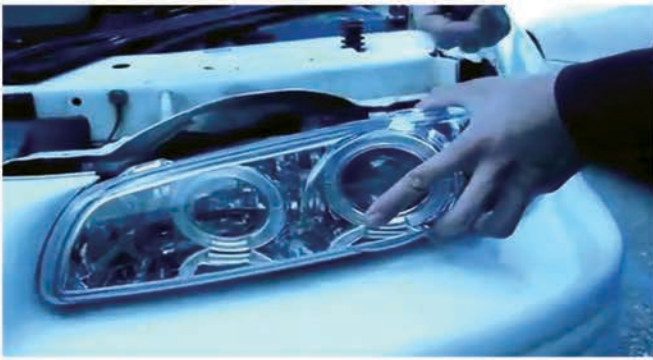

7) Seat the SPYDER headlight.



8) Reinstall two 10mm Bolts to secure headlight.



9) Enjoy your new SPYDER headlights.