



SPYDER

INSTALLATION GUIDE: PRO-YD-TYA06-(ALL COLORS)

Tools Required

10mm Socket & Ratchet
Panel Popper
Phillips Screwdriver

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the hood.




2) Remove [4x] Phillips retainers securing the fascia.



3) Remove [1x] phillips retainer securing the fascia at the wheel well.



4) Remove [5x] 10mm bolts securing the fascia to the undertray.

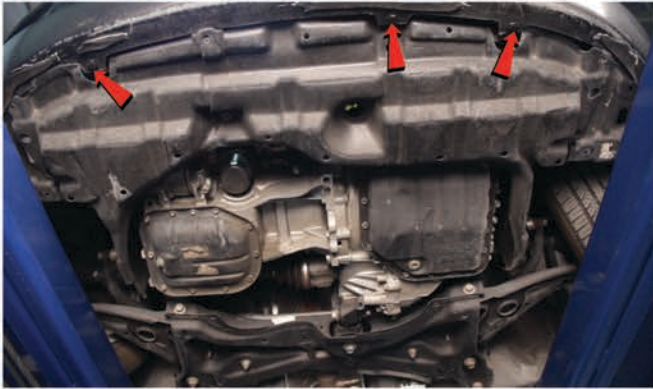

5) Remove [3x] plastic retainers securing the fascia to the undertray.



6) Remove [1x] 10mm Bolt securing the bottom corner of the fascia on each side.



7) Unseat the bumper fascia by pulling the edges out then easing it back. If equipped with foglights, disconnect them. Then remove the fascia and set it aside.



8) Remove [3x] 10mm bolts securing the headlight.



9) Unseat the headlight.




10) Disconnect the headlight, turn signal, side-marker and city light harnesses and remove the harness retainer.

We offer direct replacement factory headlights, as well as a huge selection of custom headlights in your choice of styles and lighting options.



11) Remove the city light socket from the OEM headlight. Never touch exposed bulbs with bare hands.

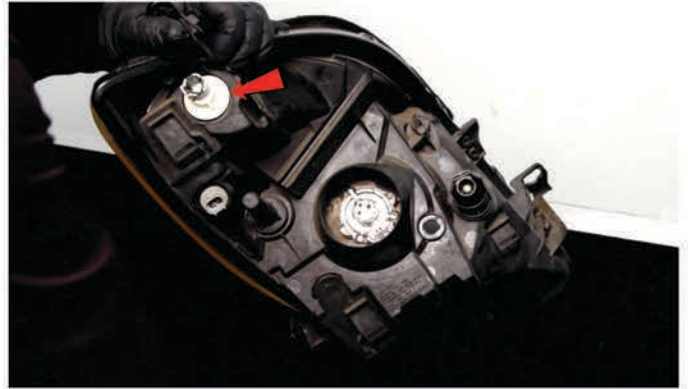


12) Remove the turn signal socket from the OEM headlight.



13) Install the turn signal socket into the Spyder headlight.



14) Install city light socket into the Spyder headlight.

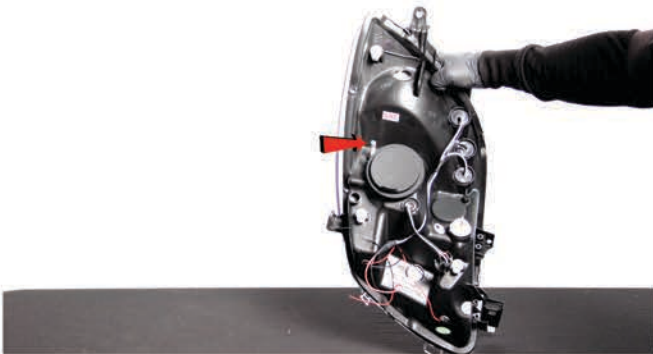

15) Your beam adjuster is 8mm and shown here. For information on how to wire the Halos and more, see the How to Wire Halos video in the Spyder FAQs playlist on the Spyder Auto YouTube channel.




16) Reconnect the headlight harness, city light harness and the turn signal harness. The side-marker harness is no longer used.



17) Seat the Spyder headlight, being sure the retainer tabs snap into place.



18) Reinstall [3x] 10mm bolts to mount the headlight.

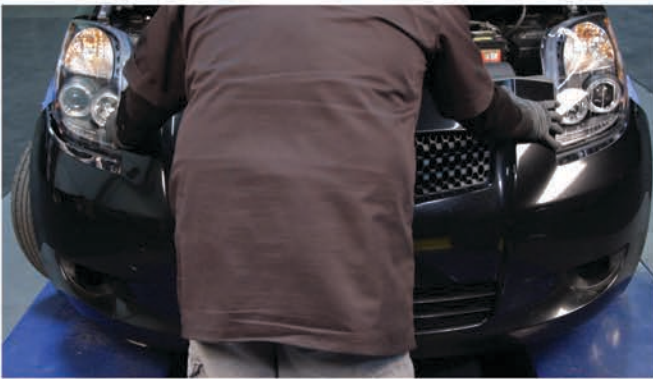

19) Seat the front bumper fascia.




20) Reinstall [4x] phillips retainers to secure the fascia.



21) Reinstall [1x] phillips retainer securing the fascia in the wheel well.



22) Reinstall [5x] 10mm bolts that secure the fascia to the undertray.

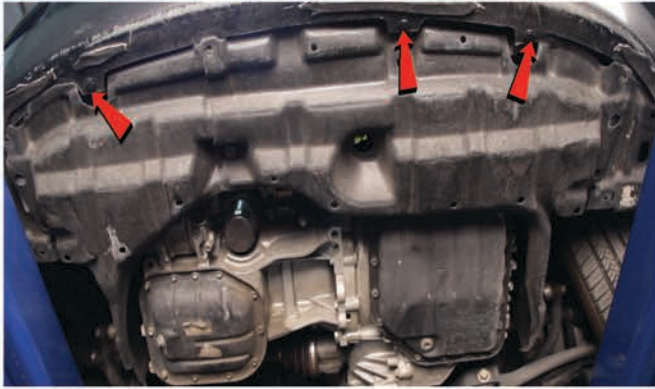

23) Reinstall [3x] plastic retainers that secure the fascia to the undertray.



24) Reinstall [1x] 10mm bolt that secures the bottom corner of the fascia on each side.



25) Close the hood and enjoy your new Spyder headlights.