



# SPYDER

## INSTALLATION GUIDE: ALT-YD-DRAM02-LED-(ALL COLORS) ALT-JH-DR02-LED-(ALL COLORS)

### Tools Required T25 Torx Screwdriver



#### \*Please Note\*


If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the tailgate. Remove the two T25 torx screws securing the OEM tail lights.



2) Unseat the tail lights.

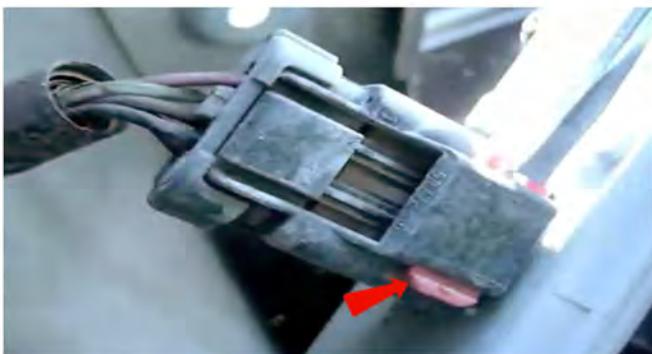

3) Disconnect the tail light harness by sliding the red locking tab free.



4) Locate your SPYDER tail light. Connect the SPYDER tail light harness to the OEM tail light harness. Slide the locking



5) Seat the SPYDER tail light.



6) Reinstall the two T25 Torx Screws to secure the tail lights. Close the tailgate.



7) Enjoy your new SPYDER LED tail lights.